



Heat & Ice

H&I-2, H&I-4, H&I-6, IGT

Operator's Manual and Technical Supplement

Belshaw Bros., Inc.
814 44th Street NW, Suite 103
Auburn, WA 98001 USA
Tel: (206) 322-5474
Fax: (206) 322-5425
Toll Free (US): 1-800-578-2547
E-mail: service@belshaw.com
www.belshaw.com

Contents

1	Operation	1
	Initial setup	1
2	Cleaning	2

Preface

The H&I Heat and Ice is designed for icing donuts and a variety of baking products quickly and easily.

It is meant to be used on a flat surface. The operator must work safely at all times, read this manual, and follow its instructions and warnings.

The H&I Heat and Ice uses electrical elements to heat water in its kettle. The machine is available with the following electrical configurations:

- 120 volts, 1 phase, 50/60 hertz
- 240 volts, 1 phase, 50/60 hertz

To use the H&I Heat and Ice safely, heed the following warnings:

- Disconnect from power source before cleaning or repairing.
- Never touch the icing pan once the machine is on. The pan gets very hot, which may cause serious burns.
- Do not overfill the kettle with water.
- Hot water can cause serious burns. Make sure that the system and the water are cool before attempting any adjustment, repair, disassembly, or cleaning.
- To avoid electrocution or other injury, unplug the machine before attempting any adjustment, repair, disassembly, or cleaning.
- To avoid damaging the machine, never use force to assemble, disassemble, operate, clean, or maintain it.
- Be careful never to get water, or other materials on the floor. If anything does get spilled on the floor, mop it up immediately. Materials on the floor can

cause people to slip or fall, resulting in serious injury or loss of life.

- To prevent unintentional startup and possible fire, unplug the machine if there is a local power outage. When the power is restored, it is safe to plug the machine in again.
- To avoid electrocution, make sure that all electrical cords are not frayed or cracked and that they do not pass through any water.
- Make sure that all electrical cords are routed so that no one will trip over them.

1

Operation



Figure 1. H&I-4

WARNING

Do not operate without proper water level.
This will prevent damage to the heater
element.

WARNING

Do not submerge the heating element or
control box with water.

Initial setup

1. Remove H&I from box.
2. Remove all packing materials.

3. Wash H&I with warm water and a mild detergent.
4. Sanitize H&I
5. Install one empty icing bowl.
6. Fill kettle with hot water until the empty icing bowl is floating ½ in. off the cover.
7. Install the remaining bowls, lids and thermometer to the kettle
8. Plug in H&I

NOTE

Use hot water to fill the H&I, using cold water can take up to 8 hours to heat up to 120°F.

9. Turn on power switch.
10. Set thermostat dial for desired icing temperature.

NOTE

Final setting will vary depending on
desired icing temperature

NOTE

Do not turn H&I off overnight; H&I can
take up to 8 hours to reheat

2

Cleaning

For your safety, observe the following warnings throughout the entire cleaning process.

WARNING

Thoroughly clean and dry the floor if glaze, water, or other materials are spilled. Materials spilled on the floor can cause serious injury or loss of life

WARNING

To avoid the possibility of shock, unplug the unit before cleaning

Once per week, clean as explained below.

WARNING

To avoid being burned, wait for icing pan to cool before removing

1. Unplug the unit. Remove any debris from the work area before disassembling the H&I.
2. Remove bowls, lid and thermometer and wash with warm soapy water, rinse and wipe dry.

3. Drain water from kettle, using the drain valve on the back of the machine.

IMPORTANT

To avoid damage to the wire / frame, use caution when removing and transporting the wire / frame

4. Clean the H&I with warm water and mild cleaner.
5. Sanitize the H&I
6. Install one empty icing bowl.
7. Fill kettle with hot water until the empty icing bowl is floating ½ in off the cover.
8. Return the remaining bowls, lids and thermometer to the kettle
9. Plug in H&I
10. Turn on power switch.

IMPORTANT

Do not hose down electrical components



Heat & Ice

H&I-2, H&I-4, H&I-6, IGT

Technical Supplement

Belshaw Bros., Inc.

814 44th Street NW, Suite 103

Auburn, WA 98001 USA

Phone: +-1-206-322-5474 • Fax: +-1-206-322-5425

Email: service@belshaw.com • <http://www.belshaw.com>

Contents

1	Installation	1
2	Maintenance	2
3	Troubleshooting	3
4	Appendix	4
	Parts List Drawing Insert Page	Insert

Preface

The H&I Heat and Ice is designed for icing donuts and a variety of baking products quickly and easily.

It is meant to be used on a flat surface. The operator must work safely at all times, read this manual, and follow its instructions and warnings.

The H&I Heat and Ice uses electrical elements to heat water in its kettle. The machine is available with the following electrical configurations:

- 120 volts, 1 phase, 50/60 hertz
- 240 volts, 1 phase, 50/60 hertz

To use the H&I Heat and Ice safely, heed the following warnings:

- Disconnect from power source before cleaning or repairing.
- Never touch the icing pan once the machine is on. The pan gets very hot, which may cause serious burns.
- Do not overfill the kettle with water.
- Hot water can cause serious burns. Make sure that the system and the water are cool before attempting any adjustment, repair, disassembly, or cleaning.
- To avoid electrocution or other injury, unplug the machine before attempting any adjustment, repair, disassembly, or cleaning.
- To avoid damaging the machine, never use force to assemble, disassemble, operate, clean, or maintain it.
- Be careful never to get water, or other materials on the floor. If anything does

get spilled on the floor, mop it up immediately. Materials on the floor can cause people to slip or fall, resulting in serious injury or loss of life.

- To prevent unintentional startup and possible fire, unplug the machine if there is a local power outage. When the power is restored, it is safe to plug the machine in again.
- To avoid electrocution, make sure that all electrical cords are not frayed or cracked and that they do not pass through any water.
- Make sure that all electrical cords are routed so that no one will trip over them.

1

Installation



NOTE: Picture depicts H&I-4 only

WARNING

Do not operate without proper water level.
This will prevent damage to the heater
element.

WARNING

Do not submerge the heating element or
control box with water.

4. Sanitize H&I
5. Install one empty icing bowl.
6. Fill kettle with hot water until the empty icing bowl is floating ½ in. off the cover.
7. Install the remaining bowls, lids and thermometer to the kettle
8. Plug in H&I

NOTE

Use hot water to fill the H&I, using cold water can take up to 8 hours to heat up to 120°F.

9. Turn on power switch.
10. Set thermostat dial for desired icing temperature.

NOTE

Final setting will vary depending on
desired icing temperature

NOTE

Do not turn H&I off overnight; H&I can
take up to 8 hours to reheat

Initial setup

1. Remove H&I from box.
2. Remove all packing materials.
3. Wash H&I with warm water and a mild detergent.

2

Maintenance

There is no maintenance required for the H&I-2, H&I-4, or IGT models.

3

Troubleshooting

If you have a problem with your H&I that you cannot solve, call your dealer or another qualified technician.

If your dealer cannot help you, please call Belshaw Bros. at (206) 322-5474. When you call, please specify the following:

- The model name of the machine.
- The serial number of the machine.
- The voltages, phase, and cycle of the machine.

CAUTION

If you perform repairs yourself or have them performed by anyone other than a service technician authorized by Belshaw Bros., you do so at your own risk.

WARNING

Disconnect the machine from the power source before disassembling, repairing, or wiring.