

784S-SS 316L MicroSpray Valve INSTALLATION GUIDE



Electronic pdf files of EFD manuals are also available at www.efd-inc.com

USA & Canada: 800-556-3484 or +1-401-434-1680

Europe: 0800 585733 or +44 (0) 1582 666334

Asia: +86 (21) 3866 9166

technical@efd-inc.com www.efd-inc.com




Introduction

The 784S-SS Aseptic Spray Valve is designed to conform to biopharmaceutical regulations for sterile fluid applications. The 784S-SS wetted components are constructed of 316L stainless steel and PTFE with a smooth aseptic fluid path which are suitable for CIP (clean in place) and SIP (sterilize in place) processes.

The 784S-SS valve is simple to use and will operate many millions of cycles without maintenance. Low volume low pressure (LVLP) nozzle air combined with small disposable dispensing tips (from 23 to 33 ga) for flow control results in high transfer efficiency onto surfaces without overspray or airborne mist.

The 784S-SS is a pneumatically operated, adjustable needle valve designed to apply micro spray deposits from 0.130" to 0.75" diameters of low to medium viscosity fluids. Also available with a fan air cap for wider area of coverage.

The 784S-SS provides exceptional control and the absolute minimum dead volume. Each spray valve is shipped with a spray tip kit, fluid inlet fitting and 5-foot actuating and nozzle air hose installed.

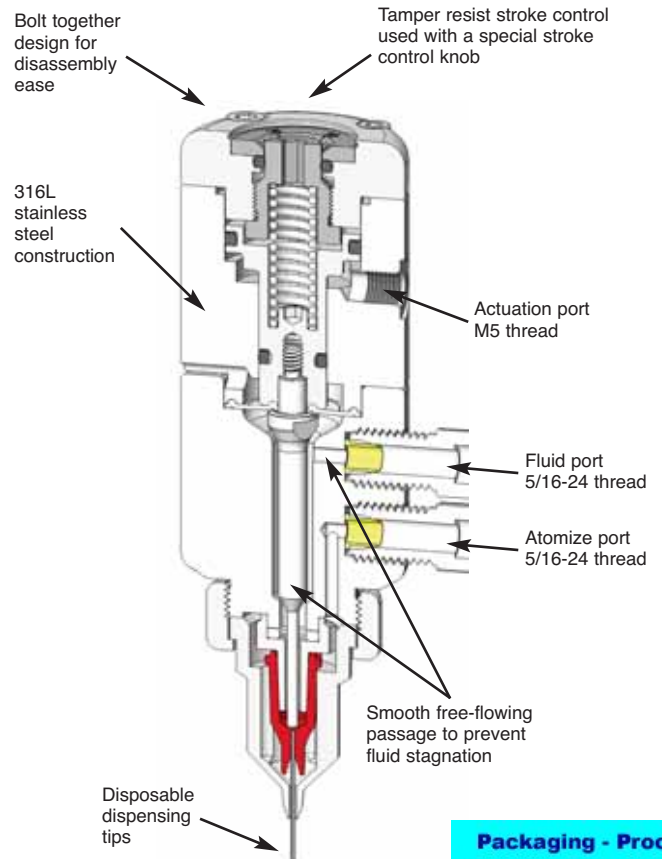

To order 784S-SS Spray Valve round pattern refer to part #7012988,
784S-SS-F fan pattern #7013000.

Packaging - Processing
Bid on Equipment
1-847-683-7720
www.bid-on-equipment.com

Installation


Prior to installing this valve, please read the associated valve controller operating instructions to become familiar with the operation of all components of the spray system.

1. Connect the fluid supply line from aseptic reservoir to valve.
2. Connect the fluid supply line to the aseptic reservoir. (Note: not available from EFD)
3. Connect the control air hose and the nozzle air hose to corresponding outputs
4. Fill aseptic reservoir with fluid.
5. Set reservoir pressure to low for thin fluids and higher for thick fluids.
6. Using the Mode **MODE** button on the ValveMate controller, place the controller in the PURGE **PURGE** mode. In PURGE **PURGE** mode only, channels **1** and **2** can be selected **SEL** independently without nozzle air pressure.
7. Using the needle stroke control knob on the 784S-SS valve, set the fluid flow rate

to one or two drops per second. Insert 3mm hex wrench into keyed inner stroke control knob. Turn counterclockwise to open. Check flow rate by actuating the controller in the time override mode. Make valve stroke adjustments when the controller is off.

8. Set the nozzle air pressure on the nozzle to 10 psi (0.7 bar) and actuate the controller. The valve will produce a fine spray. To change fluid flow, use the needle stroke control knob and/or reservoir pressure. To change nozzle air, use the nozzle air pressure regulator. Higher pressures will provide finer spray.

Note: The area of spray coverage is determined by the distance between the spray valve nozzle/tip and the work surface.

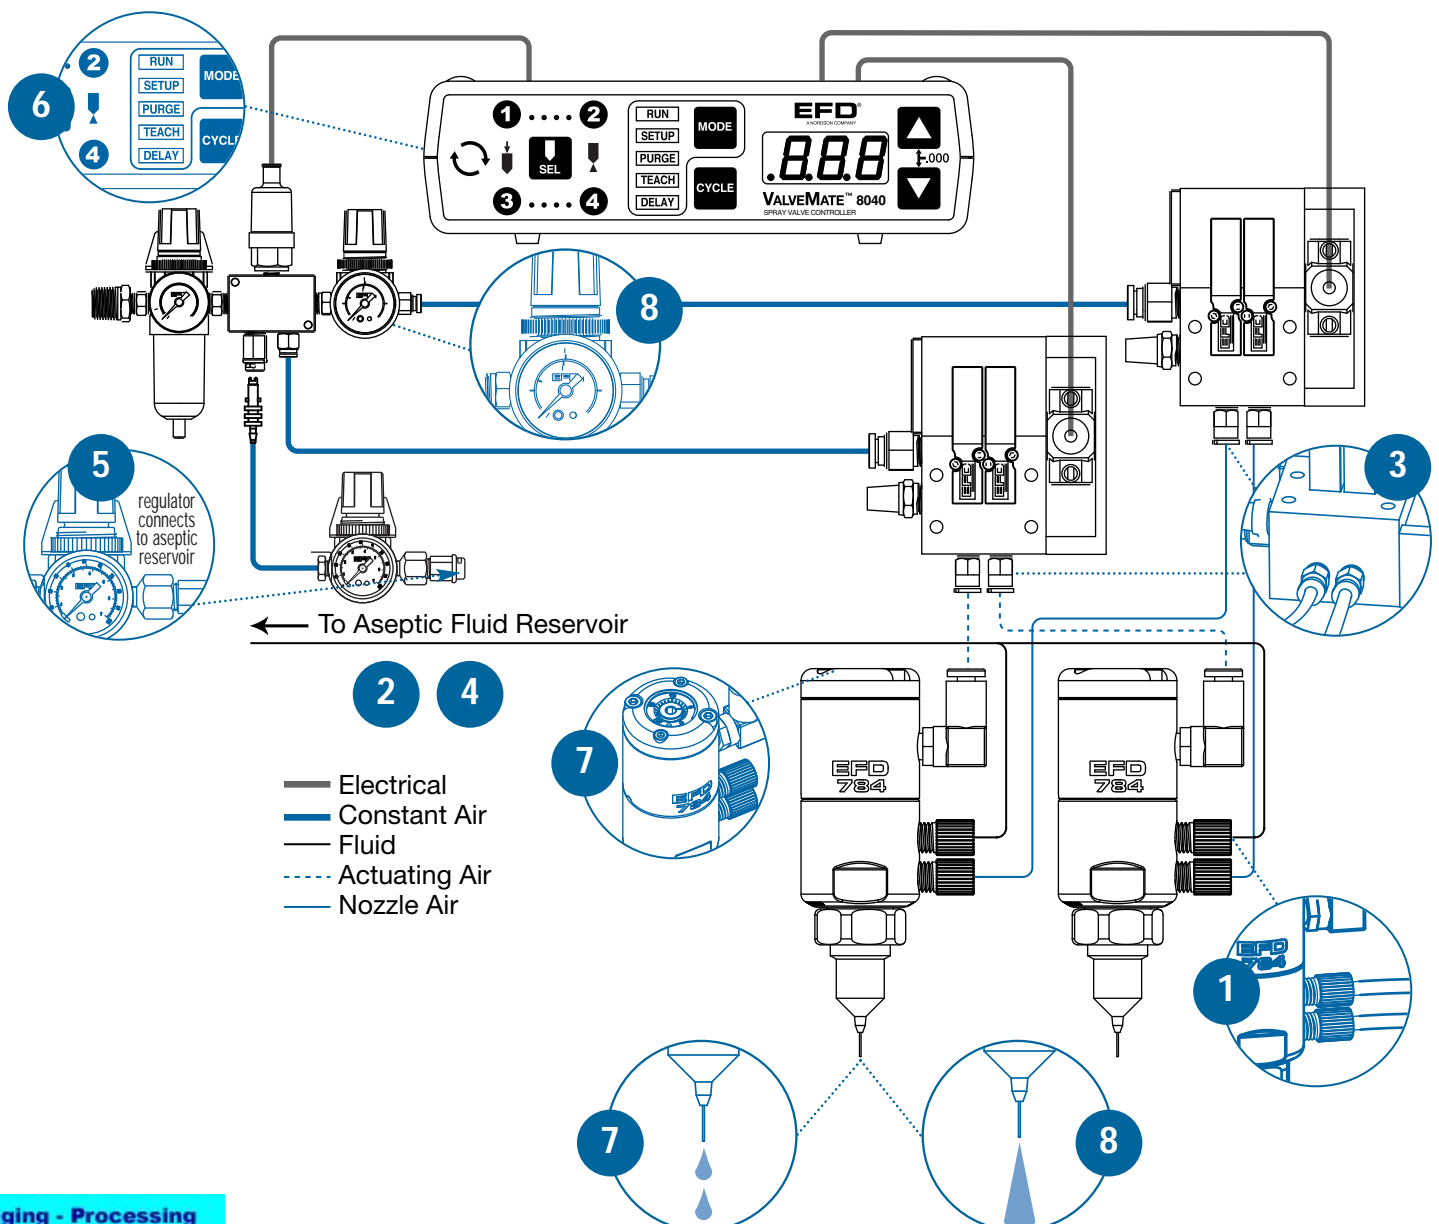

How the Valve Operates

Figure 1. Input air pressure at 70 psi (4.8 bar) min. - 90 psi (6.2 bar) max. retracts the piston and needle from the needle seat in the dispensing tip, permitting fluid flow through the dispensing tip. Use small diameter tips for low viscosity fluids and low volume spray. Use larger diameter tips (23 gauge maximum size) for thicker fluids and higher volume spray.

Figure 2. At the same time, nozzle air is turned on and flows from an annulus around the dispensing tip. This adjustable nozzle air creates a pressure drop around the dispensing tip causing liquid to atomize in fine micro deposits.

The amount sprayed is controlled by the valve opening time, reservoir pressure, and needle stroke. Area of coverage is determined by dispensing tip selection and distance between the tip and work surface. When the dispensing tip is removed, the needle seats into a secondary seat, stopping fluid flow during tip replacement.

Figure 3. Replacing the Dispensing tip ① Turn the retaining nut counterclockwise and remove nut and air cap. ② Remove dispensing tip if installed from tip adapter. ③ Reinstall dispensing tip positioning the hub against the shoulder of the tip adapter. ④ Reinstall air cap and tighten the retaining nut.





Note: See back page for recommended tip sizes / area of coverage detail.

Figure 4. 784S-SS (#7012988) is equipped with a round air cap (use 1/2" or 1/4" long dispensing tips with round air cap) 784S-SS-F (#7013000) is equipped with a fan air cap. (Use only 1/4" long dispensing tips with fan air cap.)

Figure 5. Calibration Feature:

The stroke control reference ring of each 784S-SS valve is factory calibrated to the zero position. Slight internal variations in dispensing tips may require the stroke control to be recalibrated when tips are changed. To do so:

1. Make a note of the current stroke setting number.
2. Insert 3mm hex key (provided) into inner stroke knob.
3. Turn the hex keyed stroke knob (inner) counterclockwise one full turn.
4. Install the new dispensing tip and ensure that the retaining nut is tightened fully.
5. Turn the stroke adjustment knob clockwise until it stops.
6. Turn the numbered calibration ring until "0" aligns with the stroke knob index mark. The stroke adjustment is now calibrated to zero.
7. Reset stroke to the required position noted in step 1.

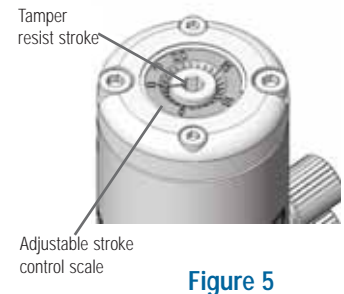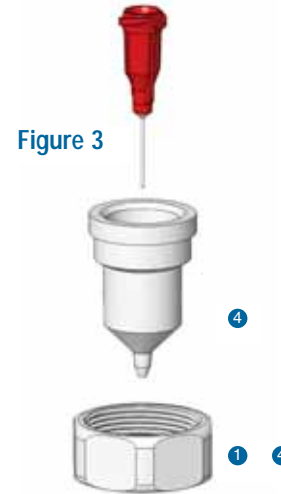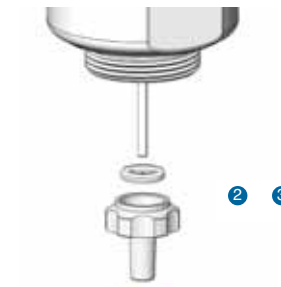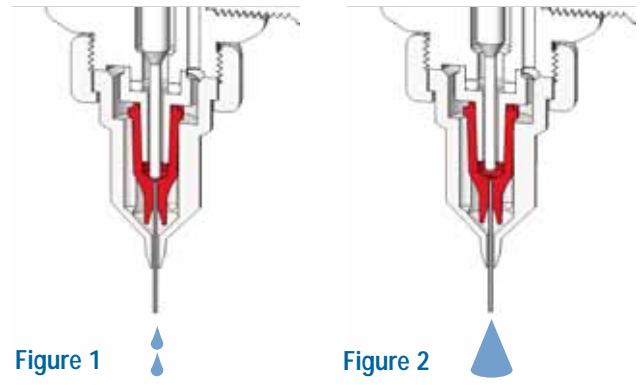


Specifications

- Size:** 31.5 mm (1.24") diameter x 96.27 mm (3.79") long
 - Weight:** 430.30 grams (15.20 ounces)
 - Fluid body:** Type 316L stainless steel
 - Air cylinder body:** Type 316L stainless steel
 - Piston:** Type 316L stainless steel
 - Needle:** Type 316L stainless steel
 - Air cap:** Type 316L stainless steel
 - Fluid inlet thread:** 5/16 - 24 UNF tapped hole
 - Diaphragm:** PTFE
 - Disposable tips:** Polypropylene hub / 304SS shaft
 - Maximum fluid pressure:** 1.7 bar (25 psi)
 - Maximum operating temperature:** Autoclaving 260°C (500°F)
 - Operating frequency:** Exceeds 400 cycles / minute
- Note: For improved surface finish, all 316L stainless steel valve parts are electro-polished and passivated

ValveMate Concept



The ValveMate 8040 provides easy adjustment of spray valve output for maximum end-user convenience and efficiency. Valve open time is the primary control of deposit size. The ValveMate 8040 puts adjustment of valve open time where it needs to be – near the spray valve.

External solenoids, combined with a 0-30 psi nozzle air pressure regulator, provide Low Volume Low Pressure (LVLP) air to the nozzle, for high transfer efficiency.

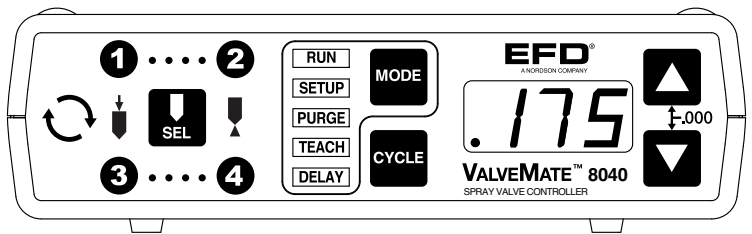

Important Note: Order your single or dual valve solenoid assemblies separately. Consult EFD for recommendations.

The primary control of deposit size is the valve open time.

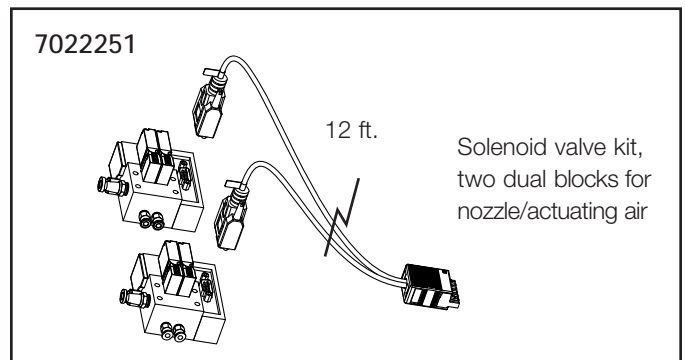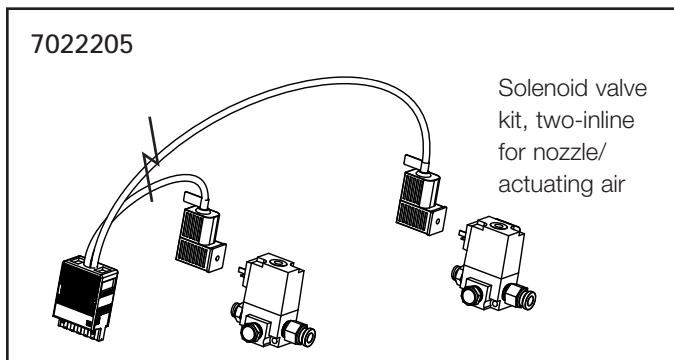

| Area of Coverage Chart | | | | |
|------------------------|--------------|---------------------------------|------|------|
| | | Distance From Surface | | |
| | | .5" | 1" | 1.5" |
| Tip | Gauge | Round Pattern – 1/4" length tip | | |
| 7018301 | 23 | .260 | .320 | .375 |
| 7018332 | 25 | .240 | .280 | .350 |
| 7018394 | 27 | .200 | .270 | .300 |
| 7018423 | 30 | .190 | .240 | .275 |
| 7018461 | 32 | .180 | .220 | .260 |
| 7018477 | 33 chamfered | .130 | .180 | .240 |
| Tip | Gauge | Round Pattern – 1/2" length tip | | |
| 7018300 | 23 | .280 | .430 | .600 |
| 7018331 | 25 | .240 | .330 | .400 |
| 7018393 | 27 | .220 | .300 | .375 |
| 7018422 | 30 | .200 | .280 | .350 |

To order 784S-SS Spray Valve round pattern refer to part #7012988, 784S-SS-F fan pattern #7013000.

| Area of Coverage Chart | | | | |
|------------------------|--------------|-------------------------------|-------|-------|
| | | Distance From Surface | | |
| | | .5" | 1" | 1.5" |
| Tip | Gauge | Fan Pattern – 1/4" length tip | | |
| 7018301 | 23 | 1.30 | 1.50 | 1.600 |
| 7018332 | 25 | .900 | 1.200 | 1.450 |
| 7018394 | 27 | .800 | 1.100 | 1.300 |
| 7018423 | 30 | .450 | .600 | .900 |
| 7018461 | 32 | .400 | .570 | .800 |
| 7018476 | 33 chamfered | .370 | .550 | .750 |

Note: Above are approximate spray pattern areas of coverage. Results may vary based on fluid type, nozzle air, stroke setting and reservoir pressure selected.

Packaging - Processing
Bid on Equipment
 1-847-683-7720
www.bid-on-equipment.com



For EFD sales and service in over 30 countries, contact EFD or go to www.efd-inc.com

EFD, Inc.
 East Providence, RI USA
 USA & Canada: 800-556-3484; +1-401-434-1680
info@efd-inc.com www.efd-inc.com

EFD International Inc.
 Dunstable, Bedfordshire, UK
 0800 585733 or +44 (0) 1582 666334
 Ireland 00800 8272 9444
europa@efd-inc.com www.efd-inc.com

EFD, Inc., Asia
 China: +86 (21) 3866 9166
china@efd-inc.com www.efd-inc.com/cn
 Singapore: +65 6796 9630 sin-mal@efd-inc.com

The Wave Design is a trademark of Nordson Corporation.
 Teflon is a registered trademark of DuPont.
 ©2008 Nordson Corporation 784S-INSTALL-01 (SAP#) #7013478 v061708