

# INSTRUCTIONS-PARTS LIST



# 308060

Rev. J



This manual contains important warnings and information.  
**READ AND KEEP FOR REFERENCE.**

INSTRUCTIONS

First choice when quality counts.™

## STAND PIPE MOUNTED; CORROSION-RESISTANT OR WATERBORNE Crown Imperial Pumps


250 psi (1.7 MPa, 17 bar) Maximum Working Pressure

*Electric, Multi-Stage, Centrifugal,  
Stand Pipe Mounted Pumps for Circulating Systems with  
60 in. (1.5 m) Maximum Tank Height*

**Motor  
Not Included  
with Pump**

### PUMP MODEL CHART

| No. of Stages | Corrosion Resistant<br>Standard size for 60 in.<br>(152cm) max. tank height | Waterborne<br>Standard size for 60 in.<br>(152 cm) max. tank height |
|---------------|---|---|
|               | Model No.   | Model No.   |
| 6             | 223806  | 223706  |
| 7             | 223807  | 223707  |
| 8             | 223808  | 223708  |
| 9             | 223809  | 223709  |
| 10            | 223810  | 223710  |
| 11            | 223811  | 223711  |
| 12            | 223812  | 223712 </td   |
| 13            | 223813  | 223713  |
| 14            | 223814  | 223714  |
| 15            | NONE  | 237015  |

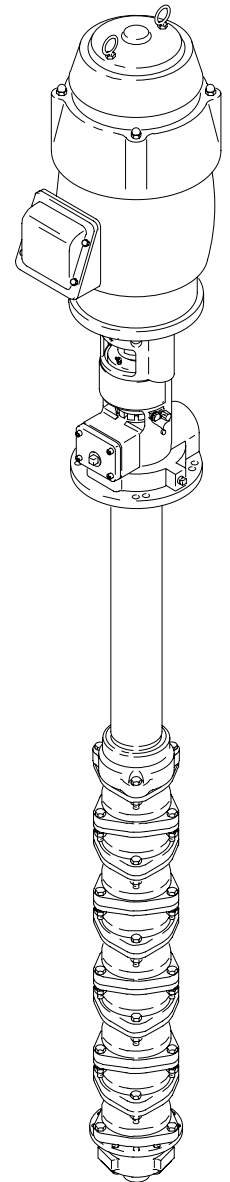

TI0571B

### STANDPIPE

66 in. (1.7 m) high. Purchase separately.

| Diameter           | Stainless Steel Model No. | Carbon Steel Model No. |
|--------------------|---------------------------|------------------------|
| 8 in.<br>(203 mm)  | 208995                    | 214644                 |
| 11 in.<br>(279 mm) | 904628*                   | 903683*                |

\* Adapter plate 903688 is required with this stand.  
Order separately.

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

©COPYRIGHT 1990, GRACO INC.

Graco Inc. is registered to I.S. EN ISO 9001



HO03

# Table of Contents

|                              |    |
|------------------------------|----|
| Warnings .....               | 2  |
| Installation .....           | 4  |
| Operation .....              | 7  |
| Lubrication .....            | 9  |
| Preventive Maintenance ..... | 9  |
| Troubleshooting .....        | 10 |
| Service .....                | 12 |
| Parts .....                  | 20 |
| Dimensions .....             | 24 |
| Accessories .....            | 26 |
| Technical Data .....         | 29 |
| Warranty .....               | 30 |
| Phone Numbers .....          | 30 |

# Symbols

## Warning Symbol



This symbol alerts you to the possibility of serious injury or death if you do not follow the instructions.

## Caution Symbol



This symbol alerts you to the possibility of damage to or destruction of equipment if you do not follow the corresponding instructions.

# ⚠ WARNING



INSTRUCTIONS

## EQUIPMENT MISUSE HAZARD

Equipment misuse can cause the equipment to rupture or malfunction and result in serious injury.

- This equipment is for professional use only.
- Read all instruction manuals, tags, and labels before operating the equipment.
- Use the equipment only for its intended purpose. If you are not sure, call your Graco distributor.
- Do not alter or modify this equipment.
- Check equipment daily. Repair or replace worn or damaged parts immediately.
- Do not exceed the maximum working pressure of the lowest rated system component. Refer to the **Technical Data** on page 29 for the maximum working pressure of this equipment.
- Use fluids and solvents which are compatible with the equipment wetted parts. Refer to the **Technical Data** section of all equipment manuals. Read the fluid and solvent manufacturer's warnings.
- Wear hearing protection when operating this equipment.
- Comply with all applicable local, state, and national fire, electrical, and safety regulations.



## FIRE, EXPLOSION, AND ELECTRIC SHOCK HAZARD

Improper grounding, poor ventilation, open flames or sparks can cause a hazardous condition and result in a fire or explosion and serious injury.

- Ground the equipment. Refer to **Grounding** on page 5.
- If there is any static sparking or you feel an electric shock while using this equipment, **stop spraying immediately**. Do not use the equipment until you identify and correct the problem.
- Provide fresh air ventilation to avoid the buildup of flammable fumes from solvents or the fluid being sprayed.
- Consult the electric motor manufacturer for the proper heater-breaker requirements.



## MOVING PARTS HAZARD

Moving parts in the pump housing can pinch or amputate your fingers.


- Keep clear of all moving parts when starting or operating the pump.
- Keep all tools, etc. away from the moving parts to reduce the risk of accidentally catching and breaking them.
- Before servicing the equipment, shut off the electric power, **relieve the pressure**, and drain the pump by opening the drain valve at the pump base.



## HOT SURFACE HAZARD

- The pump housing and pump shaft couplers become hot during operation. To reduce the risk of burning yourself, do not touch them until they have cooled.

# Installation

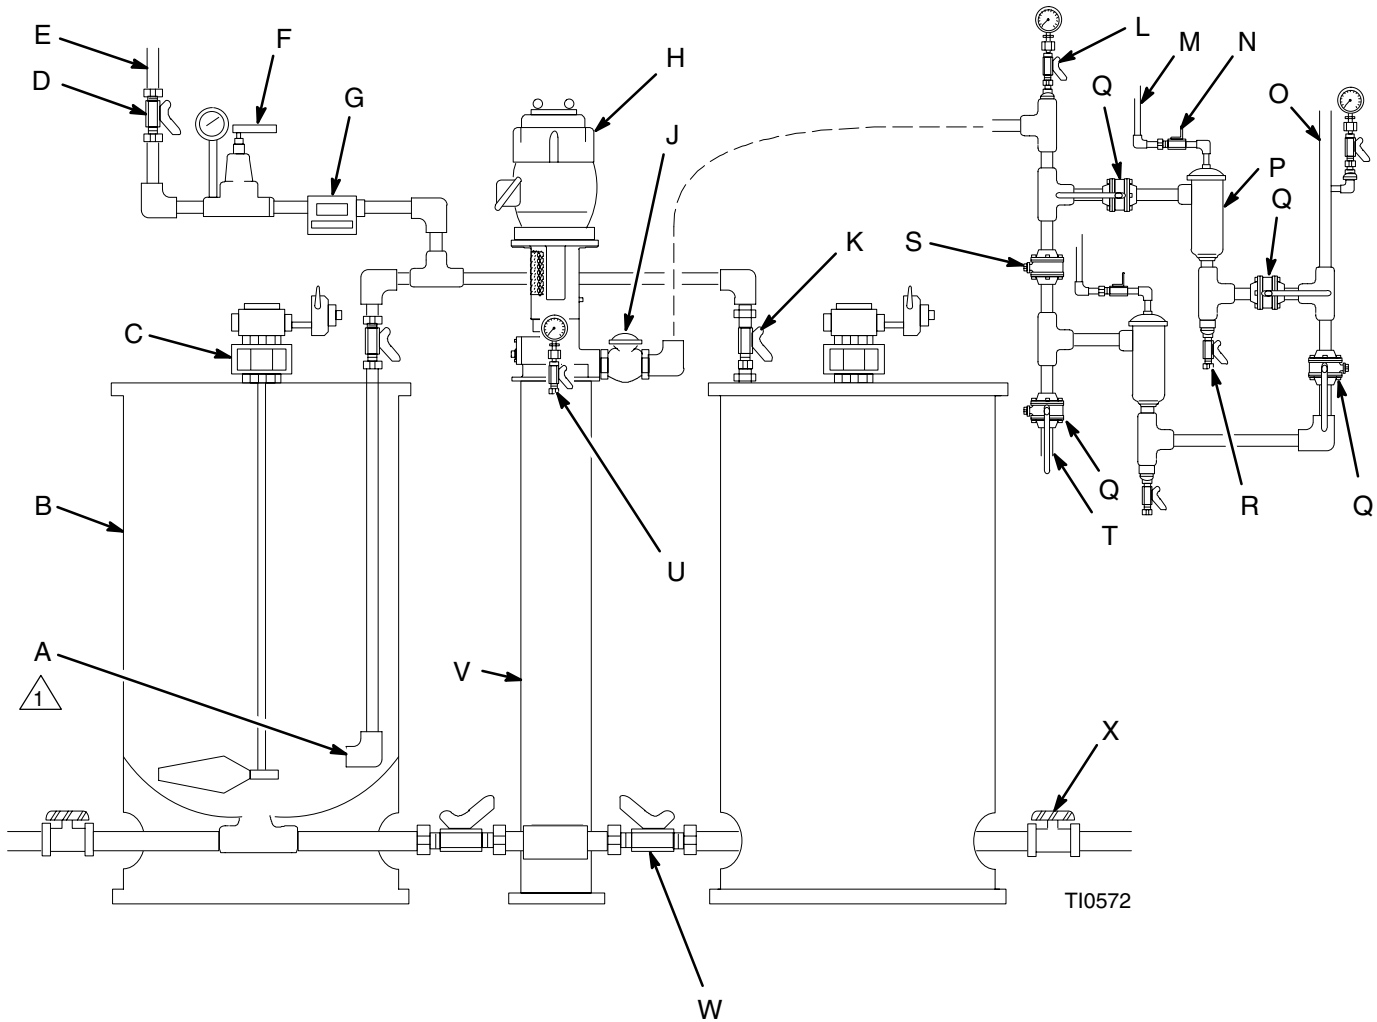

TI0572

## KEY

|                              |  |   |  |
|------------------------------|--|---|--|
| A Elbow                      | H Motor  | N Air Blowdown Valve                            | T To Standby Pump                        |
| B Mix Tank                   | J Check Valve  | O To Spray Booth                                | U Outlet Pressure Gauge with Drain Valve |
| C Agitator                   | K Tank Shutoff Valve   | P Fluid Filter                                  | V Standpipe                              |
| D Shutoff Valve, Return Line | L Pressure Gauge with Pulsation Dampener and Isolation Valve | Q Line Isolation Valve                          | W Outlet Shutoff Valve                   |
| E Return Line                | M Open to Air  | R Filter Drain Valve                            | X Tank Drain Valve                       |
| F Back Pressure Valve        |  | S Standby Pump/System Blowdown Connection Valve |  |
| G Flow Meter                 |  |   |  |


 To minimize turbulence, extend return line to bottom of tank and use elbow to direct flow around perimeter of tank.

Fig. 1

# Installation

## Grounding

### **WARNING**

Ground the pump in accordance with all applicable safety codes in your area. Proper grounding reduces the risk of shock, fire, or explosion caused by static sparking, which can result in serious injury and property damage.

1. Have a licensed electrician complete the electrical hookup and wiring.
2. Consult the electric motor manufacturer for proper heater-breaker requirements.
3. Before coupling the pump coupler to the motor shaft coupler, check to be sure the shaft rotates in the proper direction. Refer to Fig. 2, page 6.

## System Design

The **Typical Installation** shown on page 4, and the following text, is only a guide to show the relationship of the pump to other system components. Due to the pressure characteristics of the pump, which vary widely with viscosity and specific gravity, professional systems design is essential. Contact Graco (see back page) for further information.

Pump dimensions and the mounting hole layout are shown on page 24. The **Technical Data** is given on page 29.

## Fluid Lines

Line sizes depend on the flow requirements and calculated pressure drop due to the length of the run.

The pipe, tubing and fittings must be compatible with the fluid and solvent you plan to use.

Keep in mind that sharp corners and fittings between lengths of pipe or tubing may cause flow restrictions and fluid breakdown. Use the longest lengths of pipe or tubing available to minimize couplings. Use the most direct route to the spray stations, and whenever practical, use long sweeping bends. A “holsclaw” bender is recommended for making bends in tubing; a common electrician’s or plumber’s bender is not satisfactory.

Remove burrs, dirt and contaminants from the ends of the tubes before installing the fittings.

## Return Line

Install a back pressure valve (F) to maintain proper line pressure to all outlets. Install a flow meter (G) to visually check the fluid flow rate.

Extend the return line (E) going into the mix tank (B) to the bottom of the tank and end it with an elbow (A). The elbow directs fluid around the walls of the tank to help minimize air entrainment in the fluid.

## Supply Line

Install a line check valve (J) near the 2 in. npt(f) pump outlet.

### **CAUTION**

The line check valve (J) is required to prevent fluid backflow into the pump in case of a power failure or incorrect operating procedure.

Install a pressure gauge (G) at the plugged 1/2 npt(f) port at the left of the pump outlet. Make sure the gauge is correctly rated for the operating pressure.

## Fluid Filters

Install two fluid filters (P) with line isolation valves (Q) on each side. This allows the system to be used while cleaning a filter.

# Installation

## Mounting the Pump

Secure the pump, **without the motor**, in the pump standpipe (V), using the bolts provided.

Be sure the pump inlet and the plumbing to the mix tanks are at the same level. Install the necessary plumbing, using shims as necessary. Then bolt the pump standpipe and the tanks securely to the floor.

### ⚠ CAUTION

Do not flush the pump with any acid, caustic or abrasive flush solution (line stripper) of any type. The pump is designed to circulate automotive paint coatings only.

## After All Lines Are Installed

Flush all lines with a compatible solvent and blow out with air. Then clean the elements of the filters (P).

## Installing the Motor

Remove the protective cover and the shipping dowel from the pump base (31). Remove the motor coupler (29).

When wiring the motor, be sure the shaft rotates in the direction shown on the pump base and in Fig. 2.

Place the motor coupler (29) on the motor shaft (A), pushing it up, well beyond the end of the shaft. Lightly snug the setscrew (B).

Lower the motor onto the pump base, making sure the motor locating flange seats properly on the pump base.

Loosen the motor coupler setscrew (B). Pull the coupler (29) down to engage with the pump coupler (58) and coupling insert (6).

Adjust the motor coupler to 0.094 in. (2.39 mm) clearance. See Fig. 2. Tighten the pump coupler setscrew.

### ⚠ CAUTION

1. Before operating the pump, turn the motor coupler by hand to be sure the shaft rotates freely in the correct direction. Then recheck the 0.094 in. (2.39 mm) coupler clearance.
2. The pump is factory-set to deliver maximum outlet pressure. Do not tamper with this adjustment as it could cause damage to the impellers and bowls and void the warranty.
3. Never leave any contaminants, nuts, bolts, rags, etc., in the fluid tank or supply lines as they could seriously damage the impellers or bowls.

- 1 Outlet Pressure Gauge  
2 Direction of Rotation for Motor

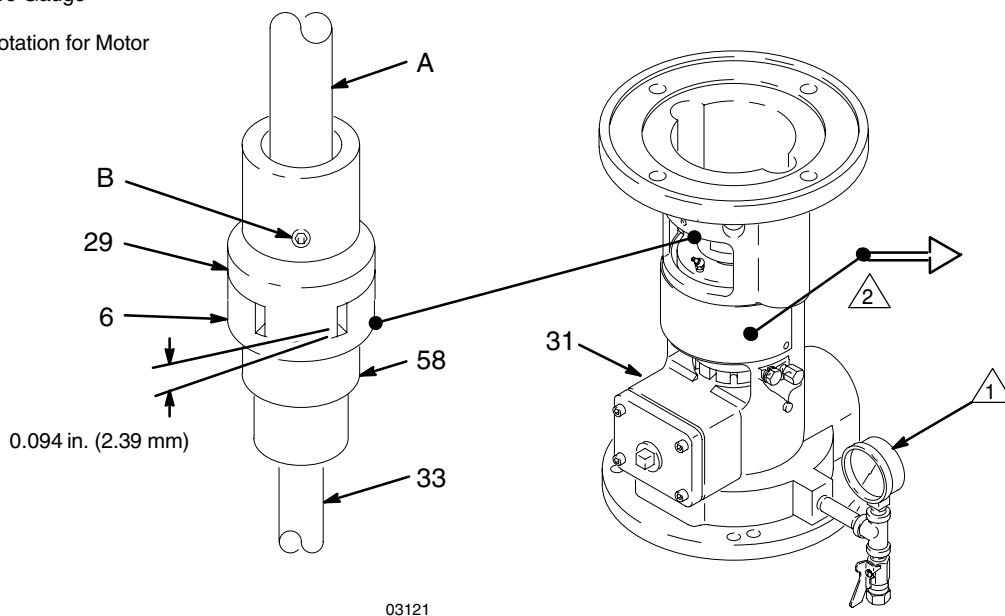


Fig. 2

# Operation

## CAUTION

The pump is designed for continuous operation. Regular shutdown at night or on weekends may cause premature bearing wear and invalidate the warranty.

Do not let the pump run dry. Operating the pump for more than 10 seconds without fluid circulating through it will overheat the pump and damage it.

## Flushing and Priming System

(See the *Typical Installation and Fig. 2.*)

The procedure given here is for a stand-mounted pump, two mix tank system as shown in the **Typical Installation** on page 4. Some specific instructions may not apply to other systems; consult your plant's flushing procedures.

Flushing is important; it cleans all equipment and lines of impurities. Following these instructions will help assure satisfactory operation with quality control.

## CAUTION

1. Be sure the motor rotates in the correct direction and the drive coupler clearance is set at 0.094 in. (2.39 mm). See Fig. 2.
2. If the motor labors or the pump does not run smoothly, check the motor for high amp draw and check the thrust bearing for overheating. The normal operating temperature is from 120° to 150° F (49° to 65° C). If the temperature is higher than 150° F (65° C), consult a qualified Graco representative after a repair check of the drive coupler clearance.
3. Be sure the circulating lines are flushed and primed with fluid as instructed below. Do not flush the pump with any acid, caustic or abrasive flush solution (line stripper) of any type. The pump is designed to circulate automotive paint coatings only.

1. Preparing to flush the inside of the mix tanks
  - a. Close the outlet valves (W) of both tanks.
  - b. Pour about 100 gallons (380 liters) of the appropriate solvent into each tank.
  - c. Open the outlet (W) and return valves (K) on one tank only.

2. Starting the pump  
(Always use this procedure to start the pump)
  - a. Close the isolation valves (Q) on one filter.
  - b. Use the valve (Q) in front of the other filter to control the pump flow to 50 psi (3.5 bar) until the lines are full. Then completely open the valve.
  - c. Run the pump for several minutes, and then shut off the pump.
  - d. Recheck the drive coupler for 0.094 in. (2.39 mm) clearance.

## CAUTION

The pump coupler and bearing could move up during shipment and then, when the pump is operated, it could move down, leaving too much clearance. This could damage both the coupler insert and the coupler.

3. Checking the system for leaks
  - a. Restart the pump and check the entire system for leaks.
  - b. Tighten leaking joints as necessary.
  - c. Periodically check for leaks during flushing.
4. Continue flushing
  - a. Continue circulating the solvent, changing the solvent as needed until the system is thoroughly flushed.
  - b. When the system is clean, stop the pump.
  - c. Drain all filtered residue from the filters (P).
  - d. Reconnect the return line (E) to the back pressure valve (F).

# Operation

- e. Close the outlet (W) and return valves (K) for the tank being used and open the outlet and return valves for the other tank.
  - f. Start the pump and circulate the solvent for at least one hour.
  - g. While circulating, open the spray gun at each drop and flush the hoses with about one gallon (4 liters) of solvent.
5. When flushing is complete
- a. Stop the pump and drain all solvent from the tanks and lines.
  - b. Open the filter drain valves (R) to flush out all filtered residue.
  - c. Thoroughly blow out the entire system with clean, dry compressed air, or nitrogen, to remove all solvent from the system.
6. Pumping paint
- a. Fill a tank with paint and start the agitator (C).
  - b. Start the pump.
  - c. Use the filter isolation valve (Q) to control the pump flow to 50 psi (3.5 bar) until the lines are full, and then open the valve completely.
  - d. Circulate the paint until all air is removed from the fluid lines.
  - e. While the paint is circulating, check and adjust the viscosity as necessary.
7. Filling standby tank
- a. Fill the other mix tank (*standby tank*) with paint and start the agitator.
  - b. Leave the agitator running so that paint in the standby tank will be ready for use when needed.
  - c. To keep air out of the system, always switch to the standby tank before the paint supply in the tank you have been using is completely exhausted.

## 8. Flushing paint from system

Consult the paint supplier for a compatible solvent for flushing paint from the system. Water reducible paints should use de-ionized water and a solvent which will keep resin in the solution. If water reducible paint has a 20% solvent content, the flush media should also contain approximately 20% solvent.

### CAUTION

Do not flush the pump with any acid, caustic or abrasive flush solution (line stripper) of any type. The pump is designed to circulate automotive paint coatings only.

### CAUTION

De-ionized (D.I.) water is an aggressive, corrosive material. It can be used on the waterborne versions of the Imperial Pumps. Exposure of all other Imperial Pumps to D.I. water should be minimized, and the D.I. water should be flushed from the pump with a non-corrosive material such as alcohol.

## Adjusting System Pressure

Use the back pressure valve (F) to adjust the system pressure.

Determine the line pressure required. Then, with paint circulating in the line loop only, set the back pressure valve so that the pressure at the last spray gun is 10 psi (0.7 bar) greater than needed.

Refer to the **Typical Installation** on page 4 and the separate back pressure valve instructions.

### CAUTION

The pump is set at the factory to deliver the maximum volume and outlet pressure. The pressure cannot be increased by any adjustment of the pump. Refer to **Pump Thrust Bearing and Seal Replacement**, page 12, for proper adjustments.

# Lubrication

Lubricate the thrust bearing once a month if the pump is operating continuously. To lubricate the bearing, pump one or two shots (about 0.1 oz/2.8 grams) of Chevron SRI/No. 2 NLGI grade grease through the fitting on the top of the seal retainer. A 14 oz. tube of this grease is supplied with the pump. See Fig. 3.

**NOTE:** Do not lubricate the bearing when you first receive the pump as it is factory greased.

|  |
|--|
| <b>⚠ CAUTION</b>   |
| Use only Chevron SRI/No. 2 NLGI grade grease to help prevent bearing overheating and premature bearing failure. This green or brown-colored grease is used for the factory pack and must not be mixed with any other type of grease. The use of any other type of grease will void the Graco Warranty. |

|  |
|--|
| <b>⚠ CAUTION</b>   |
| Do not over grease the bearing, which may cause the bearing to overheat. Remove any excess grease after lubricating. |

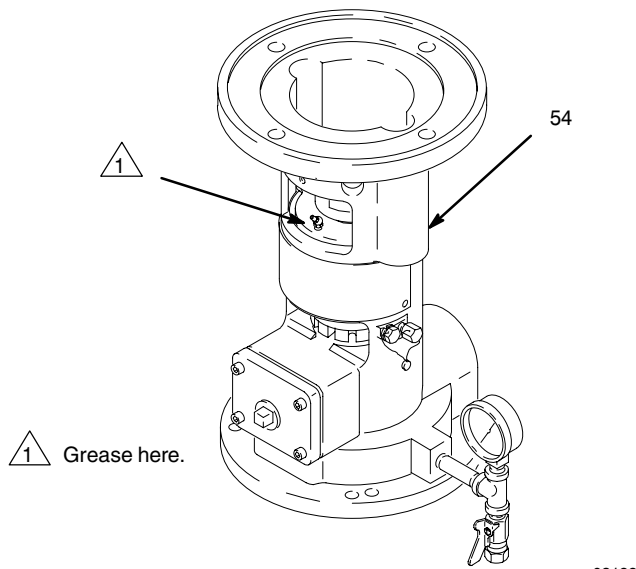


Fig. 3

3122B

## Thrust Bearing Temperature Monitoring

The 3/8" npt plug (54) can be removed from the pump base to install a temperature sensor to monitor thrust bearing temperatures. This sensor can be purchased from an appropriate outside supplier

# Preventive Maintenance

**Thrust Bearing.** Once a month, lubricate the thrust bearing if pump is run continuously. Refer to thrust bearing **Lubrication** instructions on this page. It is recommended that the Imperial pump thrust bearing assembly be replaced at least once a year.

**Pump Pressure, Flow, and Temperature.** Once a month, check the static discharge pressure, flow rate of the pump, thrust bearing temperature, and coupler clearance. Record them.

**NOTE:** If the operating temperature exceeds 150° F (65° C) and normal maintenance, troubleshooting, and service fails to reduce temperature, contact a qualified Graco representative.

|   |
|---|
| <b>⚠ CAUTION</b>  |
| Blockage of the overflow tube and overflow chamber on pump base will cause leakage through the shaft seal and adjustment nut opening. |

# Troubleshooting

## ⚠ CAUTION

When checking the pump pressure, do not leave the check valve (J) or isolation valves (Q) closed for more than 10 seconds while the pump is operating to avoid overheating the pump and damaging the seals and bearings.

**NOTE:** Graco offers a rebuild program on all Imperial and Crown Imperial pumps. Contact your local sales representative for details.

## ⚠ WARNING

Before removing the pump for repair, shut off the electric power, **relieve the pressure**, and drain the pump by opening the drain valve at the pump base. This will help reduce the risk of serious injury from electric shock, moving parts, or splashing fluid in the eyes.

| Problem                                      | Cause                           | Solution  |
|--|---------------------------------|---|
| Pump won't run.                              | 1. Electric power out.          | 1. Check fuses; clean terminals and connections.  |
|  | 2. Fuses blown.                 | 2. Check coupler clearance, replace fuses, repair pump (call Graco Detroit, see back page).     |
|  | 3. Motor inoperative.           | 3. Repair or replace motor.   |
| Pump runs but pressure drops slightly.       | 1. Clogged pump intake.         | 1. Remove and clean.  |
|  | 2. Increased flow rate.         | 2. Adjust back pressure valve.  |
|  | 3. Parts worn or damaged.       | 3. Repair pump.   |
|  | 4. Air entrained in fluid.      | 4. *Purge air. See <b>Startup Procedure</b> on page 7.  |
| Pump runs but pressure very low or unsteady. | 1. Clogged pump inlet.          | 1. *Clean.  |
|  | 2. Air entrained in fluid.      | 2. *Purge air. See <b>Startup Procedure</b> on page 7.  |
|  | 3. Problem with electric motor. | 3. Check motor for proper rotation.<br><br>Check that RPM of motor is at least 3750 under load. |

TROUBLESHOOTING CHART IS CONTINUED ON PAGE 11.

\* Before removing the pump for cleaning, close the check valve (J) or line isolation valves (Q) and note the maximum pump pressure; the pressure should be steady. **Do not** leave valves closed for more than 10 seconds.

If pressure variations or pulsations are noted, the problem could be 1.) a clogged intake, 2.) too low a fluid level in the tanks, or 3.) restricted plumbing.

Correct the clogged condition to obtain steady pressure.

Low pressure can also be caused by air entrainment in water reducible fluids. All return lines in tanks with water reducible fluid must be routed to the bottom of the tank.

Be careful to avoid allowing deteriorated pieces of bag filters into the pump which can result in serious damage to the pump.

# Troubleshooting

| Problem   | Cause   | Solution   |
|---|---|--|
| Fluid leaking.  | 1. Screws or fittings loose.  | 1. Tighten.  |
|   | 2. Parts worn or damaged.   | 2. Repair pump.  |
|   | 3. Clogged bypass drain.  | 3. Drain.  |
| Leakage at shaft seal (41).<br>(Leakage through the shaft seal/<br>adjustment nut opening.) | 1. Fluid viscosity is too light (especially if using solvent or other flushing material). | 1. Seal is designed for heavier viscosity fluid, such as paint. Problem should clear up after flushing is completed. |
| Noisy pump.   | 1. Improper coupler clearance.  | 1. Ensure 0.094 in. (2.39 mm) clearance. See Fig. 2, page 6.   |
|   | 2. Motor not seating properly to pump housing.  | 2. Loosen motor mount nuts, clean flange and rotate motor to seat properly; check seal for damage.                   |
|   | 3. Lack of grease in main thrust bearing.   | 3. See <b>Lubrication</b> on page 9; check for worn shaft bearings.  |
| Coupler insert (6) wears out prematurely.   | Motor not seating properly to pump housing.   | Loosen motor mount nuts, clean flange and rotate motor to seat properly; check seal for damage.                      |

# Service

## ⚠ CAUTION

To avoid costly damage to the pump, follow this service procedure carefully. Do not attempt to repair anything that is not mentioned in this service section.

### Before you start

Special tools needed for repairing the pump are mentioned in the text and described in the **Accessories** section on page 26. Be sure you have all the necessary tools and repair parts on hand.

### Pump Thrust Bearing and Seal Replacement


**NOTE:** It is not necessary to remove the pump from the standpipe. However, if you are also repairing the lower pump, you can install the shaft holding tool and move the pump to the repair stand at this time. Use the tool indicated in Fig. 4.

**NOTE:** Replace the pump thrust bearing (A) assembly at least once a year. Replace the assembly if the pump housing temperature goes over 150°F (53°C), which is the first sign of bearing failure.

#### Disassembly

(Refer to Fig. 5, except where indicated)

1. Shut off the power to the pump. Close the check valve (J) and/or the line isolation valves (Q). Remove the motor. Refer to **Installing the Motor** on page 6.
2. Remove the slinger chamber screws, cover and gasket (3, 21, 20). Inspect the chamber opening and clean out any residue.
3. Remove the retainer plate (58c) and rubber coupling insert (6) from the pump coupling assembly (58). Loosen the slinger (40) setscrew.
4. Hold the pump coupler (58) and screw the shaft nut (28) off the shaft (33), using a socket wrench.
5. Remove the screws, washers and springs (10, 11, 25) and lift out the coupling assembly (58).
6. Remove the bearing support (22) and key (58b) from the shaft (33).
7. Remove the adjusting nut lock screw and plug (19, 27). Then remove the adjusting nut (35).

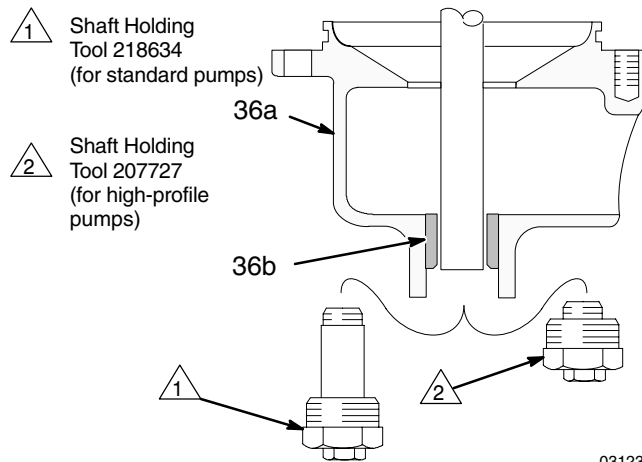

03123

Fig. 4

8. Remove the three screws (13) and shaft seal assembly (41).

**NOTE:** To service the lower pump section, refer to page 15. Otherwise, continue with Step 9.

9. If the pump is mounted in a repair stand, install the shaft holding tool. See Fig. 4.
10. Install the shaft seal assembly (41) with the three screws (13).
11. Replace the shaft seal (8) in the adjusting nut (35). Install the adjusting nut, engaging just one thread in the pump base (31).
12. Position the bearing support (22) on the adjusting nut (35) so its pin (P) and the slot in the support align.
13. Screw the adjusting nut (35) down just until the bearing support (22) bottoms out on the housing. Turn the nut back 1 to 1-1/2 turns to engage bearing support.
14. Slide the coupling assembly (58) over the shaft (33).
15. Align the keyway and insert the key (58b) between the coupling assembly and shaft.
16. Use the special tool, 178779, to check the shaft location dimension. Place the tool on the face of the coupler (58), between the coupler tabs as shown in the detail of Fig. 6. The tabbed portion of the tool should touch the top of the shaft (33). Screw the adjusting nut (35) up until you attain the 0.25 in. (6.3 mm) dimension.
17. Install the shaft nut (28) using a socket wrench and bottom it on the coupling assembly (58).
18. Align the hex of the nut retainer plate (58c) with the shaft nut (28) and secure the lockwire (58d).

# Service

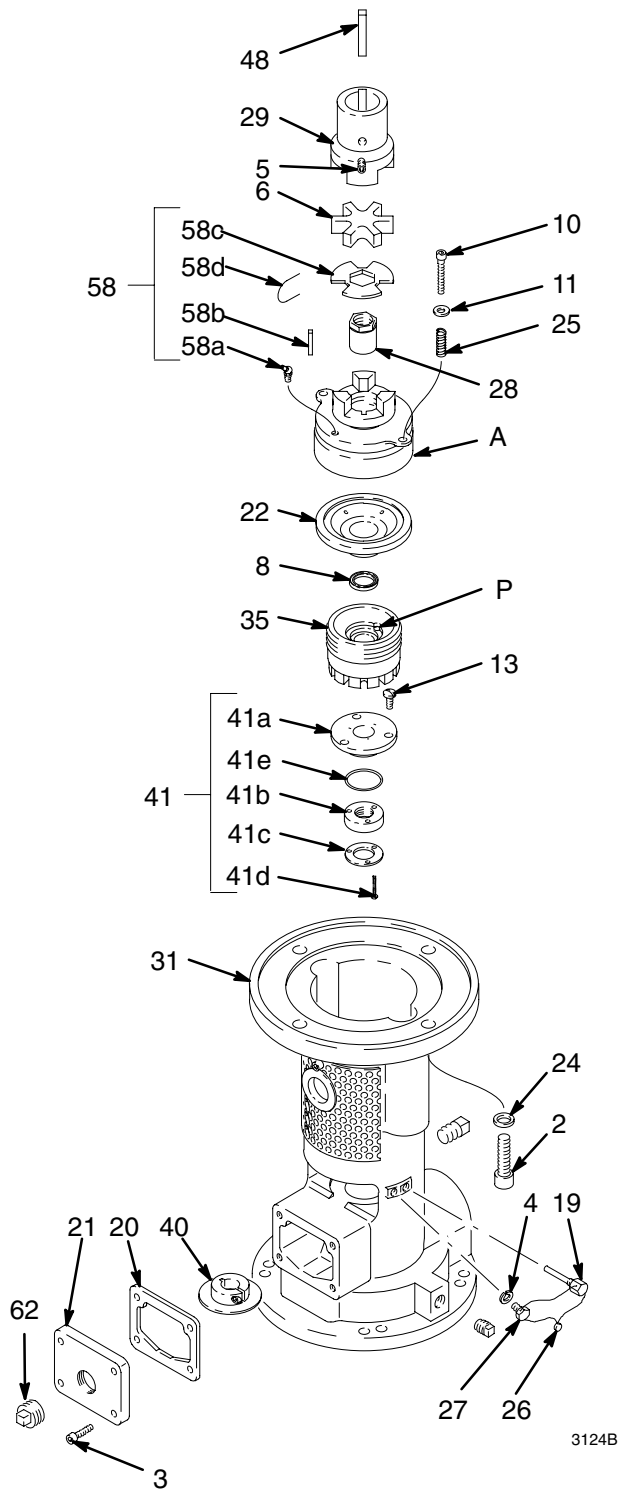


Fig. 5

19. Install the two hold-down screws, washers, and springs (10, 11, 25). Bottom the screws and check the vertical travel of the retainer (A) against the spring. If the shaft nut (28) and coupling housing (58) are properly installed, the retainer should lift 0.12 to 0.19 in. (3.2 to 3.8 mm) before the springs are solidly compressed.
20. **If the pump is mounted in an assembly stand,** loosen the shaft holding tool. See Fig. 4.

Turn the bearing adjusting nut (35) two and a half notches to the right to raise the impellers off the bowls. Now turn the pump coupler (58) to be sure the shaft (33) rotates freely. Check to see that the slinger (40) is located approximately in the center of the slinger chamber. See Fig. 6.


**If the pump is not mounted in an assembly stand,** turn the bearing adjusting nut (35) up until the shaft (only) rotates freely. Then raise it another two and a half notches to raise the impellers off the bowls. See Fig. 6.

21. Install the lock screw (19) through the pump base and into the hole in the adjusting nut (35) without forcing it. Install the plug (27). If necessary, turn the adjusting nut a little, in the same direction as pump rotation, until the plug goes in easily. Tighten the plug securely and attach the lock wire (26) and crimp. See Figs. 5 and 6.
22. Install the gasket, slinger chamber cover, and screws (20, 21, 3) on the front of the pump base.
23. Install the rubber coupling insert (6) and remount the motor. Refer to Fig. 2, page 6.
24. Remove the shaft holding tool, if installed. Install the plug (49) and gasket (50) (see the parts drawing). Start the pump. Use the filter isolation valves (Q) to control the pump flow to 50 psi (3.5 bar) until the lines are full, and then completely open the valves. Circulate the paint until all air is removed from the fluid lines. Close the check valve (J) or isolation valves (Q). Note the maximum pump pressure. The pressure should be steady. If variations or pulsations are noted, the inlet flow to the pump is restricted, due to either a clogged screen or restricted plumbing. Correct the clogged condition.


## CAUTION

When checking the pump pressure, **do not** leave the check valve (J) or isolation valves (Q) closed for more than 10 seconds while the pump is operating to avoid overheating the pump and damaging the seals and bearings.

# Service

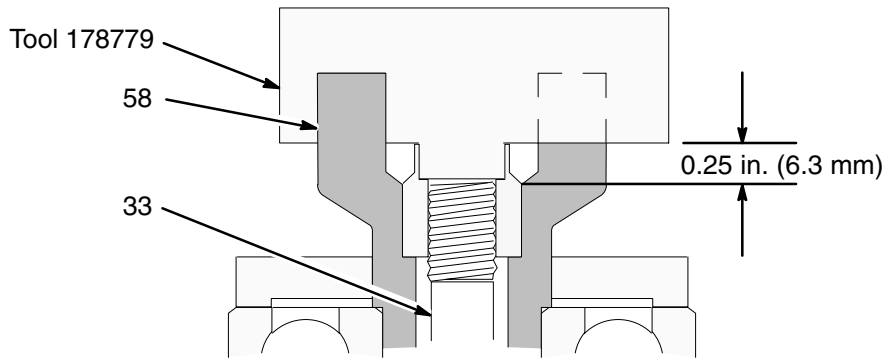

03125

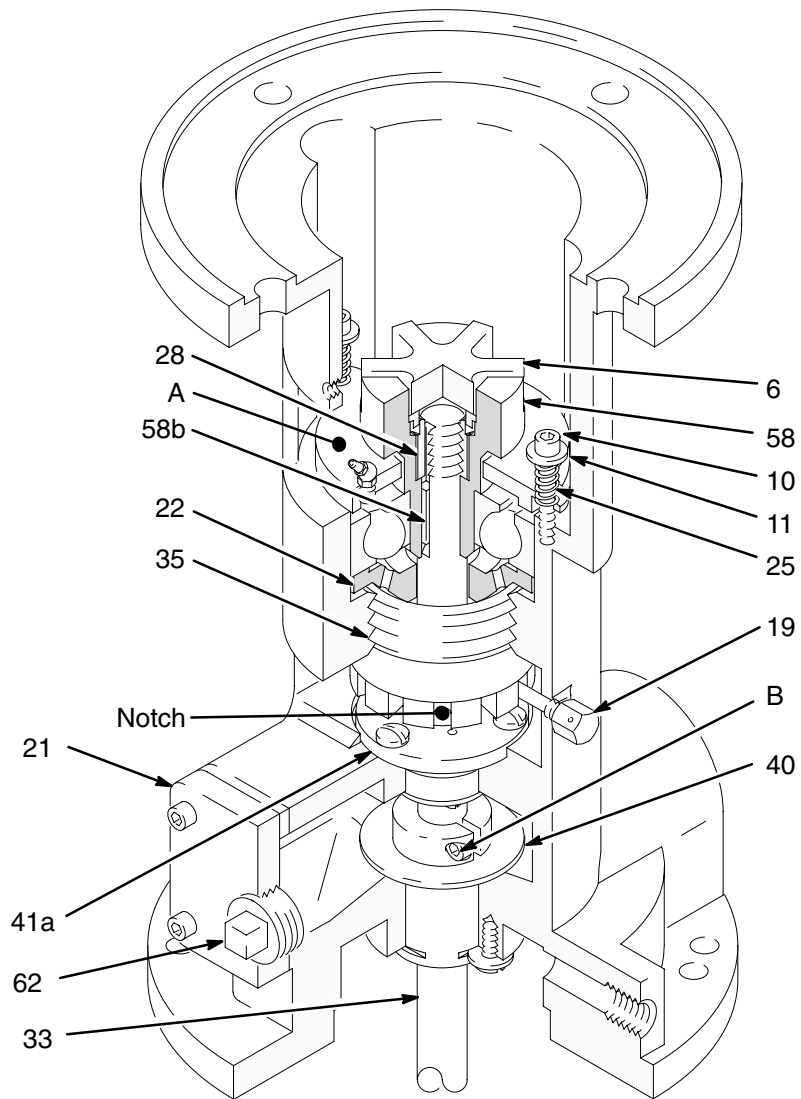


3126B

Fig. 6

# Service

25. Shut the pump off and recheck the coupler clearance; adjust if necessary to 0.094 in. (2.39 mm). See Fig. 7.
26. Remove the seal chamber cover (21) and check to be sure the slinger (40) is in the middle of the chamber. See Fig. 6. If necessary, loosen the setscrew (B) with a 0.19 in. hex key wrench to readjust the slinger. Reinstall the cover, gasket and screws (3, 20, 21).

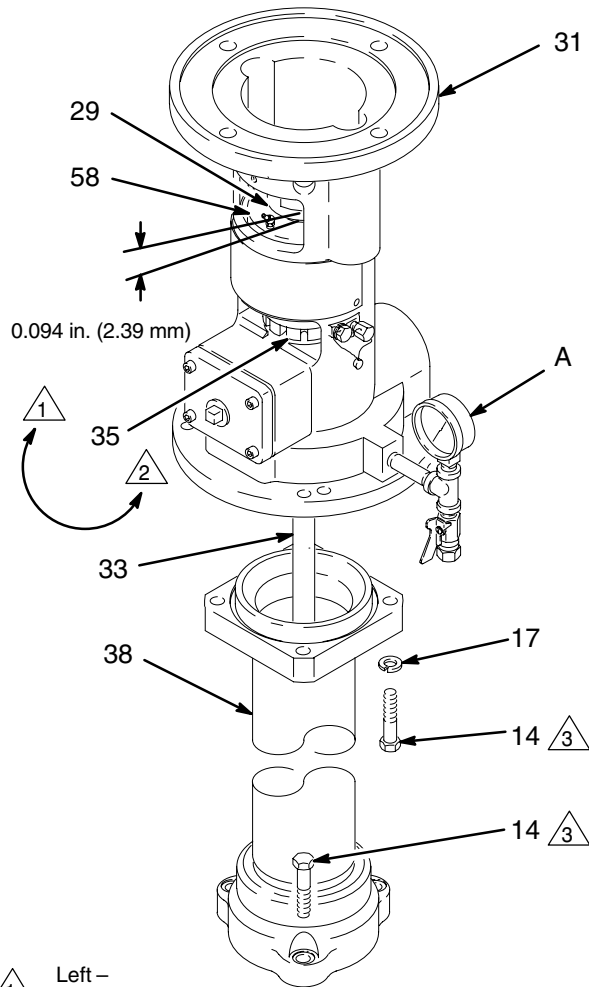

- 1 Left – Increase Pressure
- 2 Right – Decrease Pressure
- 3 Torque to 30–35 ft-lb (27–47 N.m)

03127B


Fig. 7

## Repairing Shaft Bearings, Impellers, and Seals

### Disassembly

**NOTE:** Remove the pump from the regular stand.

1. Support the pump in a vertical position on the accessory stand 953912, which must be bolted to the floor for stability. Lock the pump in place. Refer to Fig. 8.
2. Follow the disassembly procedure, Steps 1–8, on page 12.
3. Remove the capscrews (14) at the top flange of the riser tube (38). See Fig. 7.
4. Lift the pump base (31) straight up, off the shaft (33). Avoid bending the shaft by unequal pulling with a hoist or pry bars. Remove the capscrews (14) at the bottom of the tube and remove the riser tube (38). See Fig. 7.

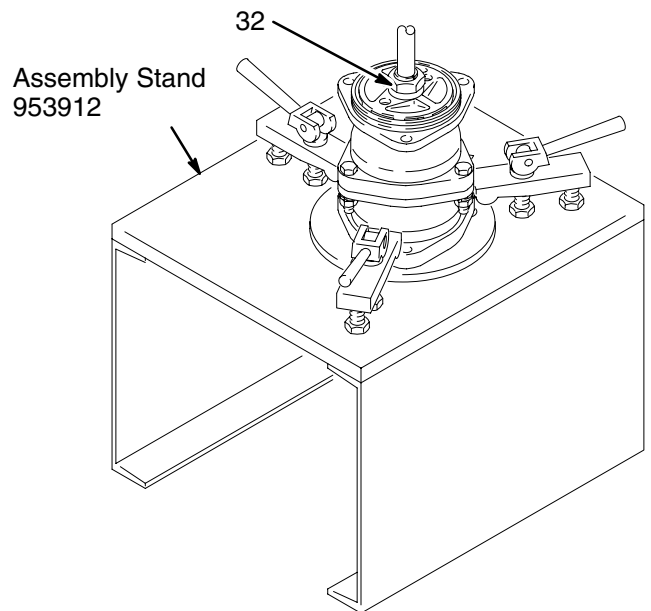

03128

Fig. 8

# Service

5. Disassemble the impeller bowls, working from the top down.

a. Hold the first impeller with a spanner wrench 616637 and use a close fitting wrench to loosen the impeller nut (32) 1-1/2 turns. See Fig. 8.

b. Place a 3/4 in. (19 mm) ID soft-steel, protecting bushing, with a smooth turned end, on top of the hex nut. Use a sharp downward blow with a 1 foot (300 mm) length of pipe or tube over the shaft (33) to loosen the collet (18). See Fig. 9.

c. Remove the collet (18) and impeller (30). Do not pry the impeller.

d. Remove all of the impeller bowl assemblies in this way.


6. Inspect the shaft (33) for scoring or wear and replace it, if needed. Check all bowls and impellers for wear or damage and replace as needed. Install new o-rings (9) on all impeller bowls (37b) and the intake bowl (36a), then lubricate the o-rings in place. Be sure the impeller nuts (32) rotate freely on the collets.

7. To replace the bearings:

a. Use the short-nippled end of tool 177219 to press out the bearings (37a) from all bowls (37b) and the intake bowl (36a). See Fig. 10.


b. Use the long-nippled end of the tool to press new bearings (36b, 37a) into the bowls. This tool maintains the required 0.06 in. (1.6 mm) dimensions of the impeller bowls as shown in Fig. 10.

c. Thread the shaft holding tool into the bottom of the intake bowl as shown in Fig. 11.

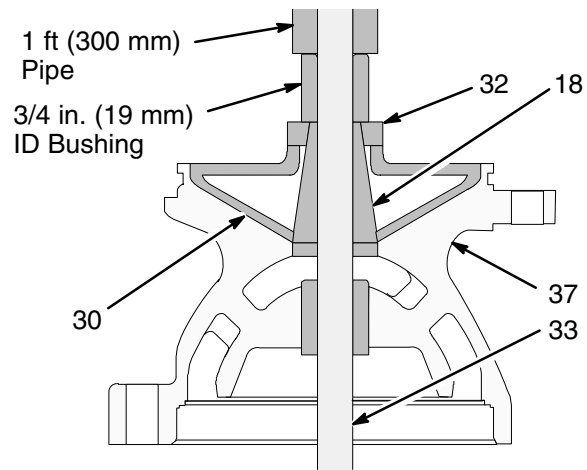

03129


Fig. 9

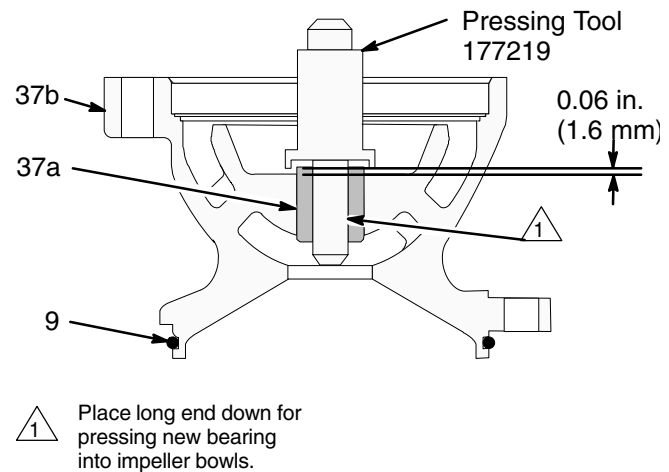

1 Place long end down for pressing new bearing into impeller bowls.

03130

Fig. 10

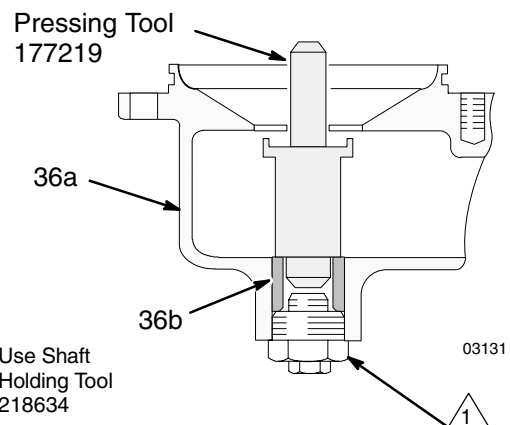

1 Use Shaft Holding Tool 218634

03131

Fig. 11

Procedure is continued on page 17.


# Service

- d. Use the short-nippled end of tool 177219 to press the new bearing into the intake bowl until it bottoms against the shaft holding tool. Refer to Fig. 10.
- e. Check the bearings for concentricity. Place the checking fixture 177218 on the bowl as shown in Fig. 12. Drop the long end of the checking tool 177217 into the center hole of the fixture. The tool should turn freely without binding. If the tool binds, the bearings must be replaced.

## Reassembly

8. Slide the shaft (33) into the bearing in the intake bowl (36a) and lock it in place with the shaft holding tool. See Fig. 13.
9. Clamp the intake bowl in a vise.
10. Assemble the first impeller (30), collet (18) and impeller nut (32) onto the shaft (33). See Fig. 14. Push downward on the impeller and hold it with the spanner wrench, 616637, while tightening the impeller nut to 130–150 ft-lb (175 – 205 N•m). Refer to Fig. 15.
11. Install the first impeller bowl (37) and bolt it to the intake bowl (36a) with screws (14) and lock-washers (17) and nuts (15). See Fig. 14.

**NOTE:** Each impeller must be bolted down tightly into the bowl while tightening the impeller. This assures contact with the machined face of the bowl, which will ensure maximum pump performance.

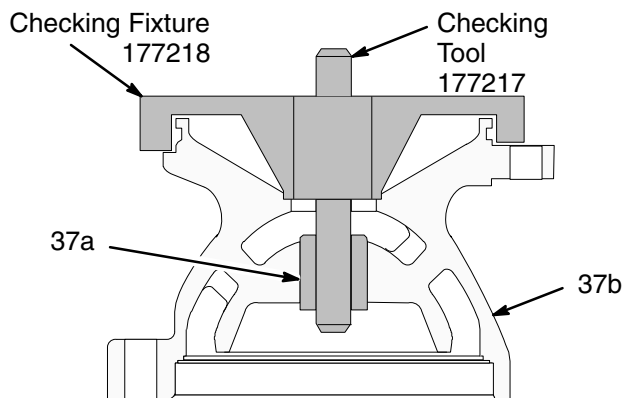

03132

Fig. 12


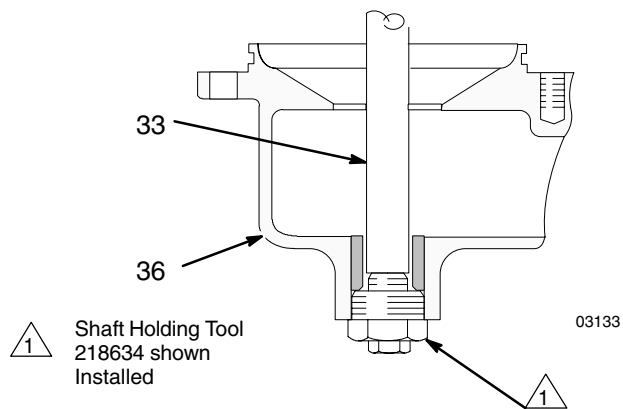


Fig. 13

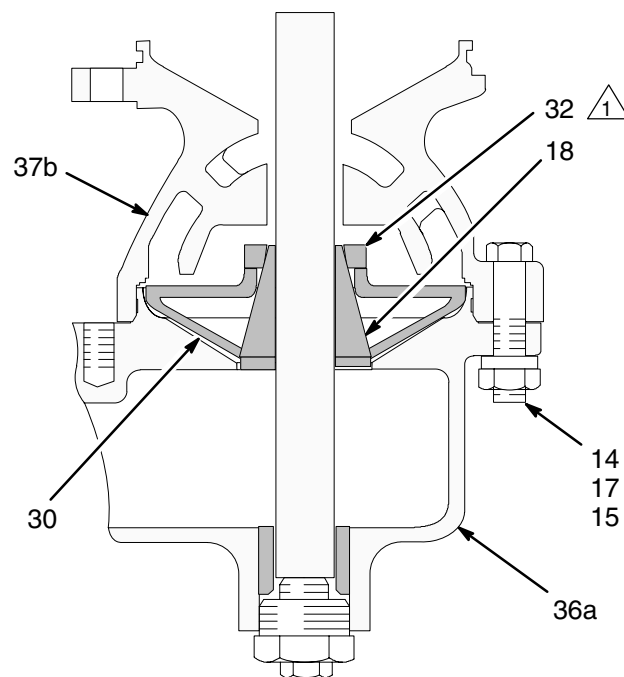

1 Torque to 130–150 ft-lb (175–205 N.m)

Fig. 14

# Service

12. Remove the assembly from the vise and mount it in the assembly stand 953912. See Fig. 15.
13. Continue assembling the bowls and impellers as in Steps 10 and 11.
14. Install the riser tube (38) with the screws (14), lockwashers (17) and nuts (15). See Fig. 7.
15. To replace the bearing (39) in the pump base (31), remove the three screws and washers (7, 34), holding the bearing from below. Press the bearing out, using a 1.5 in. (38 mm) disc laid on the bearing and a 0.68 in. (17.3 mm) rod inserted from the top to push it out. See Fig. 16. This bearing has a medium-tight fit. Replace the bearing when replacing the impeller bearings.

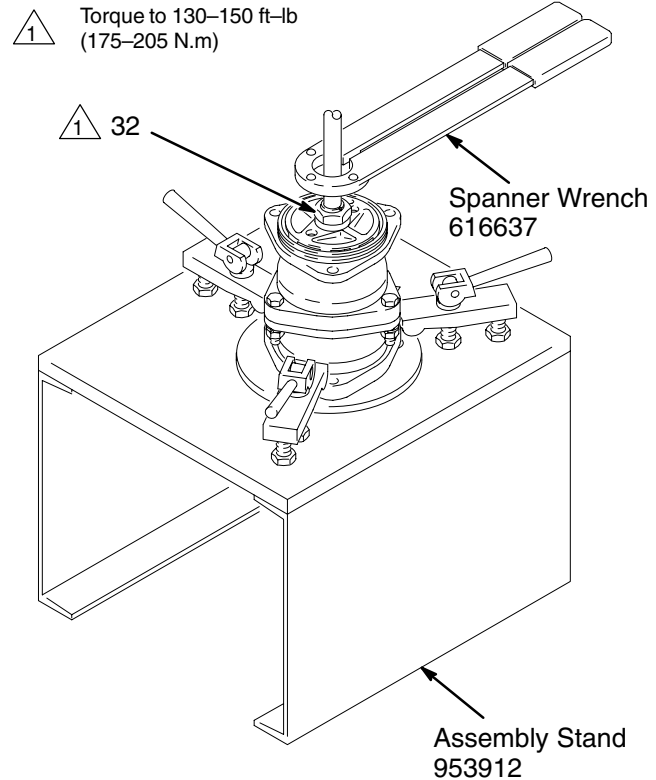


Fig. 15

03135

## Assembling Lower Pump Section to Base

**NOTE:** Be sure the pump base (31) is clean, and that a new base bearing (39) has been installed.

1. Install the slinger (40) in the pump base with the flange down. Use a wooden dowel, just under 0.75 in. (19 mm) diameter, to align the slinger when assembling the pump base onto the shaft.
2. Carefully lower the base (31) over the shaft (33), passing the shaft through the bearing and slinger. Seat the base firmly on the riser tube (38). Install the four capscrews (14) and washers (17). Torque to 30-35 ft-lb (27-47 N•m). Refer to Fig. 7.
3. Adjust the slinger to the center of the seal chamber opening. Tighten the slinger setscrew (B). Refer to Fig. 6.
4. Continue assembling the pump as described in Steps 10 to 26 on pages 12 to 15.


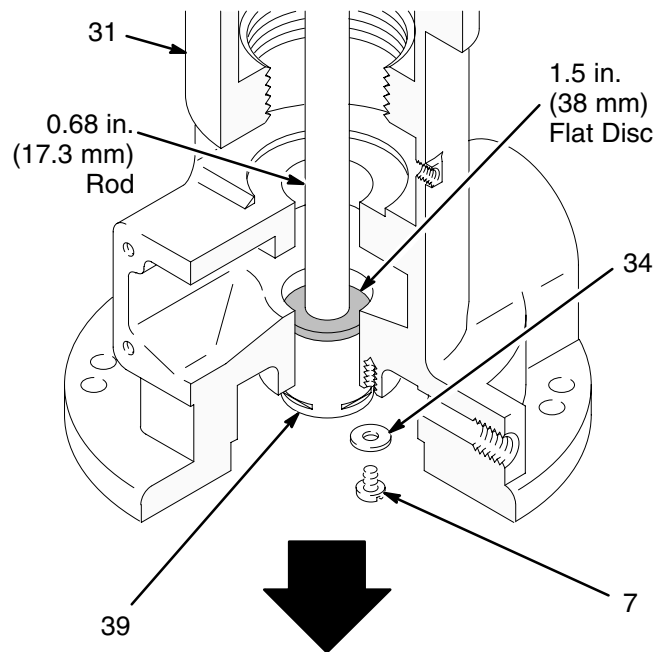


Fig. 16

03136

# Parts

## Corrosion Resistant, 60" Pump

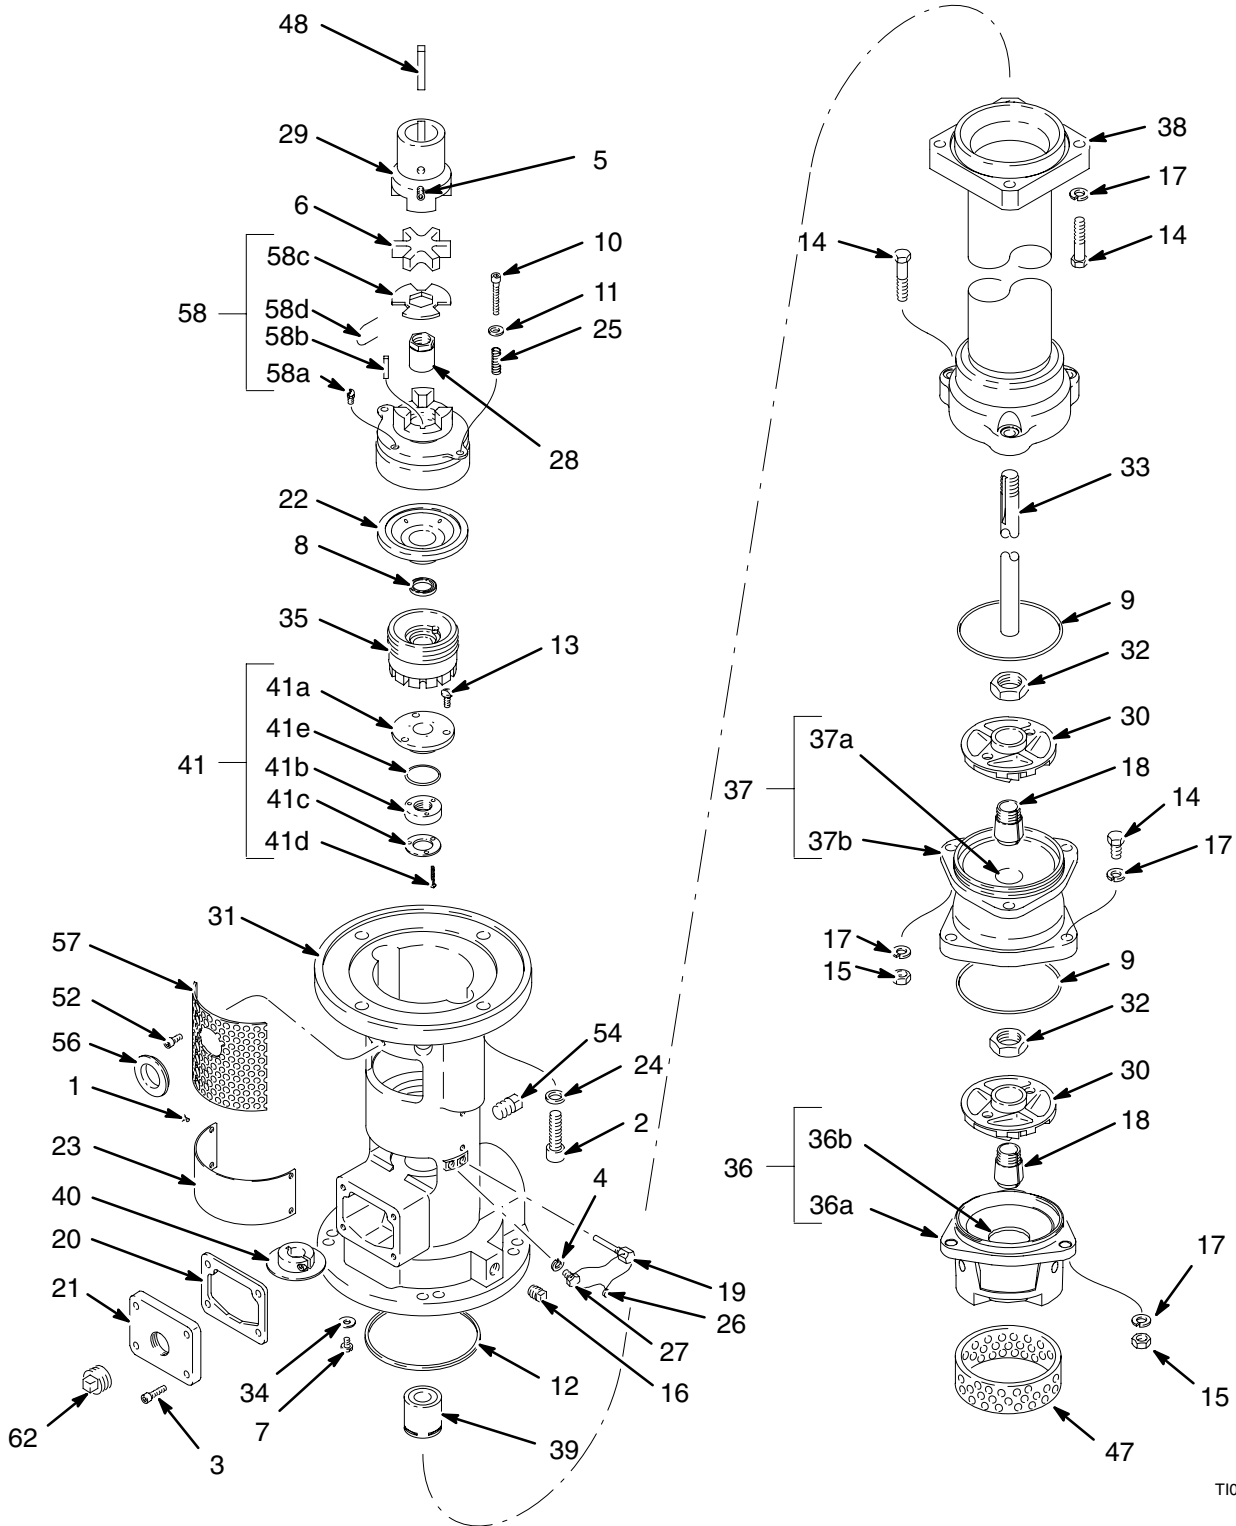

T10570B

# Parts

## Corrosion Resistant 60" Pump


| Model  | Stages |
|--------|--------|
| 223806 | 6      |
| 223807 | 7      |
| 223808 | 8      |
| 223809 | 9      |
| 223810 | 10     |
| 223811 | 11     |
| 223812 | 12     |
| 223813 | 13     |
| 223814 | 14     |

| Ref No. | Part No. | Description  | Qty     | Ref No. | Part No.                          | Description  | Qty     |
|---------|----------|--|---------|---------|-----------------------------------|--|---------|
|         |          |  |         | 24      | 168381                            | WASHER, .53" ID  | 4       |
|         |          |  |         | 25      | 186111*                           | SPRING, compression  | 2       |
|         |          |  |         | 26      | 104274                            | LOCK, wire   | 1       |
|         |          |  |         | 27      | 171711                            | PLUG, special  | 1       |
|         |          |  |         | 28      | 168500*                           | NUT, shaft   | 1       |
|         |          |  |         | 29      | 170067                            | COUPLING, motor<br>fits 1.38" (35 mm) motor shaft              | 1       |
|         |          |  |         |         | 169445                            | fits 1.12" (28.4 mm) motor shaft                               | 1       |
|         |          |  |         | 30      | 170748*                           | IMPELLER, pump   | 1/Stage |
|         |          |  |         | 31      | 186096                            | BASE, pump   | 1       |
|         |          |  |         | 32      | 170770*                           | NUT, impeller  | 1/Stage |
|         |          |  |         | 33      | 176879                            | SHAFT, impeller  | 1       |
|         |          |  |         | 34      | 170772                            | WASHER, plain, 1/4"  | 3       |
|         |          |  |         | 35      | 207769                            | NUT, adjusting   | 1       |
|         |          |  |         | 36      | 215573                            | INTAKE BOWL ASSEMBLY<br><i>Includes item 36a and 37b</i>       | 1       |
| 1       | 100055   | SCREW, type "u" self tap, no. 6 x 1/4"             | 4       | 36a     | 176878                            | . HOUSING, intake bowl   | 1       |
| 2       | 110343   | CAPSCREW, hex hd, 1/2-13 x 1-3/4"                  | 4       | 36b     | 176851                            | . BEARING, intake bowl   | 1       |
| 3       | 110787   | CAPSCREW, sch, 1/4-28 unf-3a x .75"                | 4       | 37      | 218092                            | IMPELLER BOWL ASSEMBLY<br><i>Includes items 37a and 37b</i>    | 1       |
| 4       | 100214   | LOCKWASHER, spring, 5/16"                          | 1       |         |                                   | <b>6 to 11 Stage Pumps</b>                                     | 10      |
| 5       | 100640   | SCREW, cup pt slotted<br>headless set, 5/16 x 3/8" | 1       |         |                                   | <b>12 &amp; 13 Stage Pumps</b>                                 | 12      |
| 6       | 102211*  | INSERT, coupling, rubber                           | 1       |         |                                   | <b>14 Stage Pumps</b>  | 14      |
| 7       | 110751   | SCREW, mach, pnhd,<br>1/4-28 unf-2a x .375"        | 3       | 37a     | 176851                            | . BEARING, impeller bowl                                       | 1/bowl  |
| 8       | 102776*  | SEAL, shaft  | 1       | 37b     | 179774                            | . HOUSING, impeller bowl                                       | 1/bowl  |
| 9       | 106524*  | SEAL, o-ring, Viton®                               | 1       | 38      | 218632                            | TUBE, riser, 24.5" (622 mm)                                    | 1       |
|         |          | <b>6 to 11 Stage Pumps</b>                         | 12      |         | 220008                            | <b>6 to 11 Stage Pumps</b>                                     | 1       |
|         |          | <b>12 &amp; 13 Stage Pumps</b>                     | 14      |         | 220005                            | <b>12 and 13 Stage Pumps</b>                                   | 1       |
|         |          | <b>14 Stage Pumps</b>                              | 16      |         | 218309                            | <b>14 Stage Pumps</b>  | 1       |
| 10      | 110753*  | CAPSCREW, sch, 1/4-28 unf-3a<br>x 1.625"           | 2       | 39      | 208846                            | BEARING, pump base   | 1       |
| 11      | 110755*  | WASHER, plain, .281" ID                            | 2       | 40      | 223605*                           | RING, slinger  | 1       |
| 12      | 102848*  | PACKING, sq section                                | 2       | 41      |                                   | SHAFT SEAL ASSEMBLY<br><i>Includes items 41a-41e</i>           | 1       |
| 13      | 110752   | SCREW, mach, pnhd,<br>1/4-28 unf-2a x .625"        | 3       | 41a     | 186215                            | . SUPPORT, seal  | 1       |
| 14      | 103776   | SCREW, hex hd, 7/16-14 x 2"                        | 38      | 41b     | 178697                            | . SEAL, shaft, PTFE  | 1       |
|         |          | <b>6 to 11 Stage Pumps</b>                         | 44      | 41c     | 170762                            | . RETAINER, seal   | 1       |
|         |          | <b>12 &amp; 13 Stage Pumps</b>                     | 50      | 41d     | 107246                            | . SCREW, pan hd mach, no. 5-40 x 5/8"                          | 3       |
|         |          | <b>14 Stage Pumps</b>                              | 56      | 41e     | 102895*                           | . PACKING, o-ring, Viton®                                      | 1       |
| 15      | 103777   | NUT, hex, 7/16"                                    | 30      | 47      | 177596                            | STRAINER, inlet  | 1       |
|         |          | <b>6 to 11 Stage Pumps</b>                         | 36      | 48      | 107055                            | KEY, parallel<br>5/16", use with coupling 170067               | 1       |
|         |          | <b>12 &amp; 13 Stage Pumps</b>                     | 42      |         | 160906                            | 1/4", use with coupling 169445                                 | 1       |
|         |          | <b>14 Stage Pumps</b>                              | 1       | 52      | 110754                            | CAPSCREW, sch, 1/4-28 unf-3a x .5"                             | 1       |
| 16      | 110786   | PLUG, pipe, 1/4-18 npt                             | 1       | 54      | 110762                            | PLUG, pipe, 3/8-18 npt   | 1       |
| 17      | 103780   | LOCKWASHER, spring 7/16"                           | 44      | 56      | 108027                            | GROMMET  | 1       |
|         |          | <b>6 to 11 Stage Pumps</b>                         | 50      | 57      | 186349                            | GUARD  | 1       |
|         |          | <b>12 &amp; 13 Stage Pumps</b>                     | 58      | 58      | 223606                            | COUPLING ASSEMBLY<br><i>Includes replacement items 58a-58d</i> | 1       |
|         |          | <b>14 Stage Pumps</b>                              | 58a     | 100847  | . FITTING, hydraulic, 1/4-28, 45° | 1  |         |
| 18      | 186646*  | COLLET, impeller                                   | 1/Stage | 58b     | 168372                            | . KEY, 0.187" square x 1" long                                 | 1       |
| 19      | 168352*  | SCREW, lock, adjusting nut                         | 1       | 58c     | 166007*                           | . PLATE, retainer, shaft nut                                   | 1       |
| 20      | 186117*  | GASKET, slinger                                    | 1       | 58d     | 068069*                           | . WIRE, lock   | 1       |
| 21      | 191401   | COVER, slinger ring, 1" npt port                   | 1       | 61      | 107411                            | GREASE, Chevron SRI Grease-2 14 oz.                            | 1       |
| 22      | 168363   | SUPPORT, bearing                                   | 1       | 62      | 113561                            | PLUG, 1 in., npt   | 1       |
| 23      | 186124   | PLATE, instruction                                 | 1       |         |                                   |  |         |

\* Recommended spare parts to keep on hand.

# Parts

## Waterborne 60" Pump

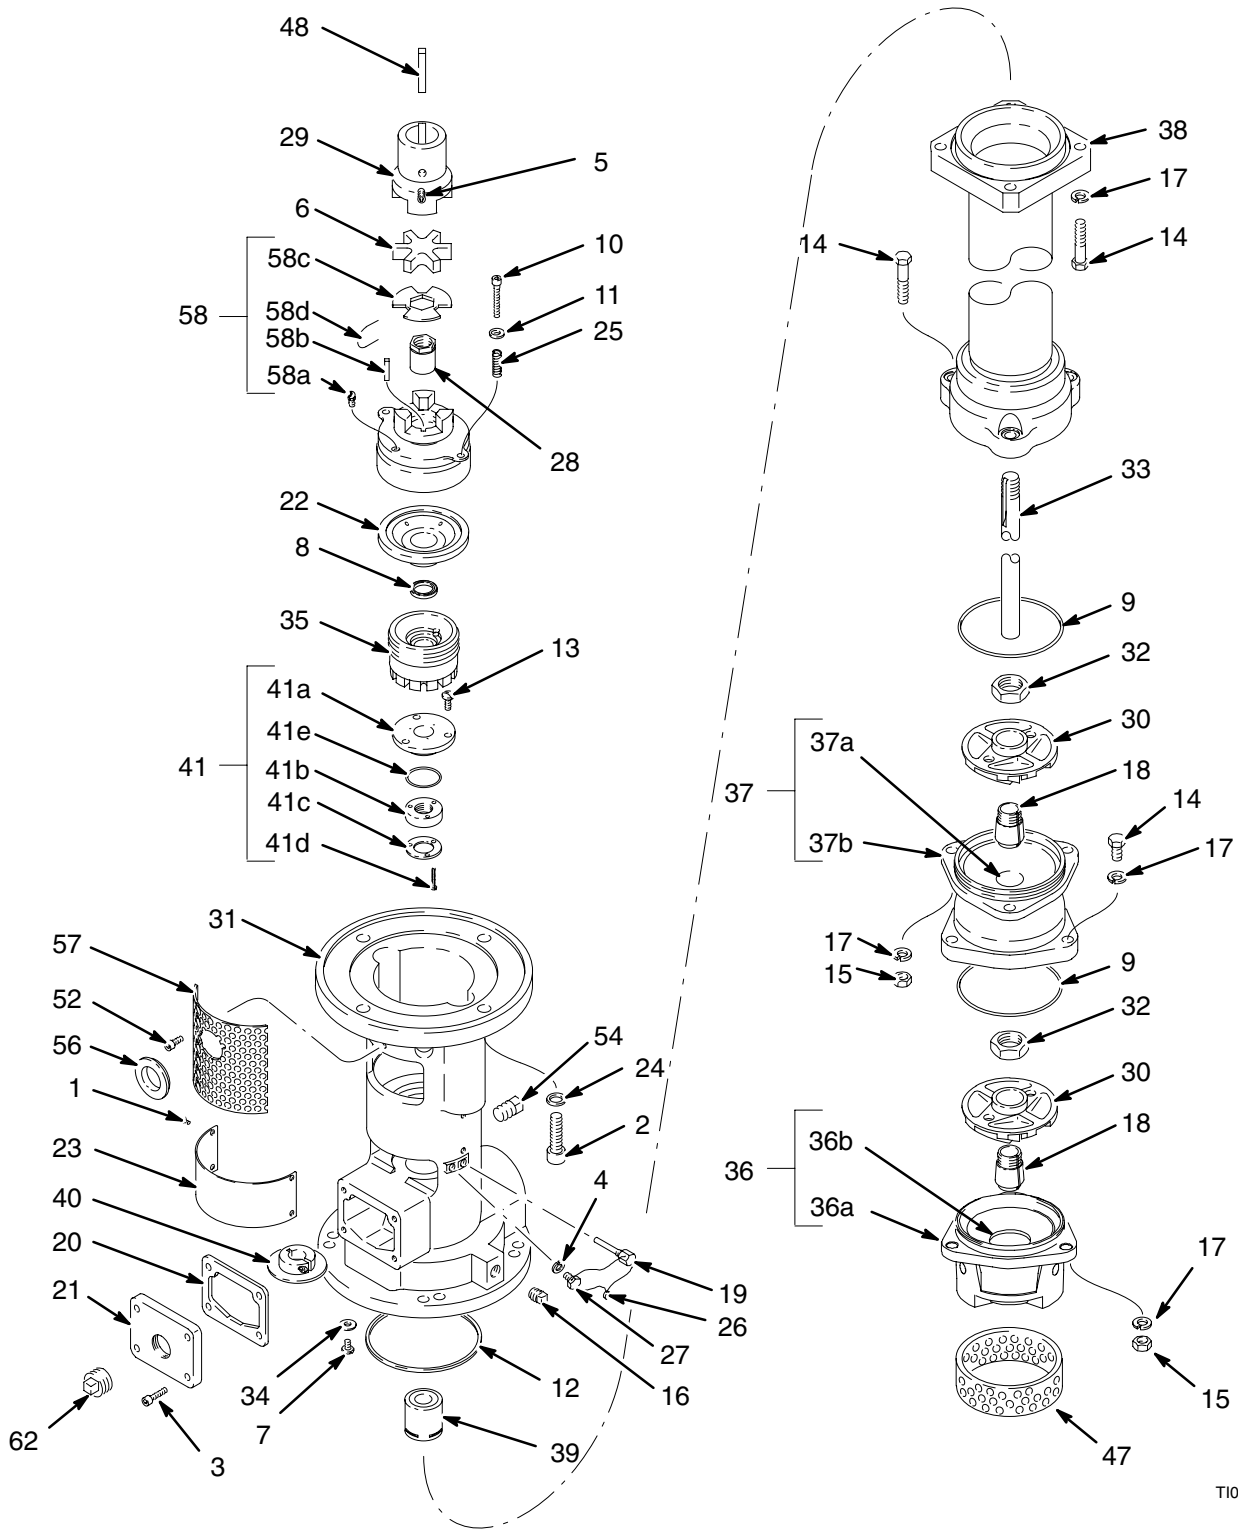

T10570B

# Parts

## Waterborne 60" Pump


| Model  | Stages |
|--------|--------|
| 223706 | 6      |
| 223707 | 7      |
| 223708 | 8      |
| 223709 | 9      |
| 223710 | 10     |
| 223711 | 11     |
| 223712 | 12     |
| 223713 | 13     |
| 223714 | 14     |
| 237015 | 15     |

### Ref

| Ref No. | Part No. | Description  | Qty     |
|---------|----------|--|---------|
| 1       | 100055   | SCREW, type "u" self tap, no. 6 x 1/4"                                   | 4       |
| 2       | 110343   | CAPSCREW, hex hd, 1/2-13 x 1-3/4"  | 4       |
| 3       | 110787   | CAPSCREW, sch, 1/4-28 unf-3a x .75"                                      | 4       |
| 4       | 100214   | LOCKWASHER, spring, 5/16"  | 1       |
| 5       | 100640   | SCREW, cup pt slotted headless set, 5/16 x 3/8"                          | 1       |
| 6       | 102211*  | INSERT, coupling, rubber   | 1       |
| 7       | 110751   | SCREW, mach, pnhd, 1/4-28 unf-2a x .375"                                 | 3       |
| 8       | 102776*  | SEAL, shaft  | 1       |
| 9       | 106524*  | SEAL, o-ring, Viton®   | 1       |
|         |          | <b>6 to 11 Stage Pumps</b>   | 11      |
|         |          | <b>12 Stage Pumps</b>  | 12      |
|         |          | <b>13 Stage Pumps</b>  | 13      |
|         |          | <b>14 Stage Pumps</b>  | 14      |
| 10      | 110753*  | CAPSCREW, sch, 1/4-28 unf-3a x 1.625"                                    | 2       |
| 11      | 110755*  | WASHER, plain, .281" ID  | 2       |
| 12      | 102848*  | PACKING, sq section  | 2       |
| 13      | 110752   | SCREW, mach, pnhd, 1/4-28 unf-2a x .625"                                 | 3       |
| 14      | 103776   | SCREW, hex hd, 7/16-14 x 2"  | 38      |
|         |          | <b>6 to 11 Stage Pumps</b>   | 44      |
|         |          | <b>12 &amp; 13 Stage Pumps</b>   | 50      |
|         |          | <b>14 Stage Pumps</b>  | 56      |
| 15      | 103777   | NUT, hex, 7/16"  | 30      |
|         |          | <b>6 to 11 Stage Pumps</b>   | 36      |
|         |          | <b>12 &amp; 13 Stage Pumps</b>   | 42      |
|         |          | <b>14 Stage Pumps</b>  | 42      |
| 16      | 110786   | PLUG, pipe, 1/4-18 npt   | 1       |
| 17      | 103780   | LOCKWASHER, spring 7/16"   | 44      |
|         |          | <b>6 to 11 Stage Pumps</b>   | 50      |
|         |          | <b>12 &amp; 13 Stage Pumps</b>   | 56      |
|         |          | <b>14 Stage Pumps</b>  | 56      |
| 18      | 186646*  | COLLET, impeller   | 1/Stage |
| 19      | 168352*  | SCREW, lock, adjusting nut   | 1       |
| 20      | 186117*  | GASKET, slinger  | 1       |
| 21      | 191401   | COVER, slinger ring, 1" npt port   | 1       |
| 22      | 168363   | SUPPORT, bearing   | 1       |
| 23      | 186124   | PLATE, instruction   | 1       |
| 24      | 168381   | WASHER, .53" ID  | 4       |
| 25      | 186111*  | SPRING, compression  | 2       |
| 26      | 104274   | LOCK, wire   | 1       |
| 27      | 171711   | PLUG, special  | 1       |
| 28      | 168500*  | NUT, shaft   | 1       |
| 29      | 170067   | COUPLING, motor fits 1.38" (35 mm) motor shaft                           | 1       |
|         | 169445   | fits 1.12" (28.4 mm) motor shaft   | 1       |
| 30      | 170748*  | IMPELLER, pump   | 1/Stage |
| 31      | 186266   | BASE, pump   | 1       |
| 32      | 170770*  | NUT, impeller  | 1/Stage |
| 33      | 176879   | SHAFT, impeller  | 1       |
| 34      | 170772   | WASHER, plain, 1/4"  | 3       |
| 35      | 207769   | NUT, adjusting   | 1       |
| 36      | 215573   | INTAKE BOWL ASSEMBLY<br><i>Includes item 36a and 37b</i>                 | 1       |
| 36a     | 176878   | . HOUSING, intake bowl   | 1       |
| 36b     | 176851   | . BEARING, intake bowl   | 1       |
| 37      | 218092   | IMPELLER BOWL ASSEMBLY<br><i>Includes items 37a and 37b</i>              | 1       |
|         |          | <b>6 to 11 Stage Pumps</b>   | 10      |
|         |          | <b>12 &amp; 13 Stage Pumps</b>   | 12      |
|         |          | <b>14 Stage Pumps</b>  | 14      |
| 37a     | 176851   | . BEARING, impeller bowl   | 1/bowl  |
| 37b     | 179774   | . HOUSING, impeller bowl   | 1/bowl  |
| 38      | 218632   | TUBE, riser, 24.5" (622 mm)  | 1       |
|         | 220008   | <b>6 to 11 Stage Pumps</b>   | 1       |
|         | 220005   | <b>12 and 13 Stage Pumps</b>   | 1       |
|         | 39       | <b>14 Stage Pumps</b>  | 1       |
|         | 218309   | BEARING, pump base   | 1       |
|         | 40       | RING, slinger  | 1       |
|         | 41       | 223605*<br>SHAFT SEAL ASSEMBLY<br><i>Includes items 41a-41e</i>          | 1       |
|         | 41a      | . SUPPORT, seal  | 1       |
|         | 41b      | . SEAL, shaft, PTFE  | 1       |
|         | 41c      | . RETAINER, seal   | 1       |
|         | 41d      | . SCREW, pan hd mach, no. 5-40 x 5/8"                                    | 3       |
|         | 41e      | . PACKING, o-ring, Viton®  | 1       |
|         | 47       | 177596<br>STRAINER, inlet  | 1       |
|         | 48       | KEY, parallel 5/16", use with coupling 170067                            | 1       |
|         | 107055   | 1/4", use with coupling 169445   | 1       |
|         | 160906   | 110754<br>CAPSCREW, sch, 1/4-28 unf-3a x .5"                             | 1       |
|         | 52       | 110762<br>PLUG, pipe, 3/8-18 npt   | 1       |
|         | 54       | 108027<br>GROMMET  | 1       |
|         | 56       | 186349<br>GUARD  | 1       |
|         | 57       | 223606<br>COUPLING ASSEMBLY<br><i>Includes replacement items 58a-58d</i> | 1       |
|         | 58a      | 100847<br>. FITTING, hydraulic, 1/4-28, 45°                              | 1       |
|         | 58b      | 168372<br>. KEY, 0.187" square x 1" long                                 | 1       |
|         | 58c      | 166007*<br>. PLATE, retainer, shaft nut                                  | 1       |
|         | 58d      | 068069*<br>. WIRE, lock  | 1       |
|         | 61       | 107411<br>GREASE, Chevron SRI Grease-2 14 oz.                            | 1       |
|         | 62       | 113561<br>PLUG, 1 in., npt   | 1       |

\* Recommended spare parts to keep on hand.

# Dimensions

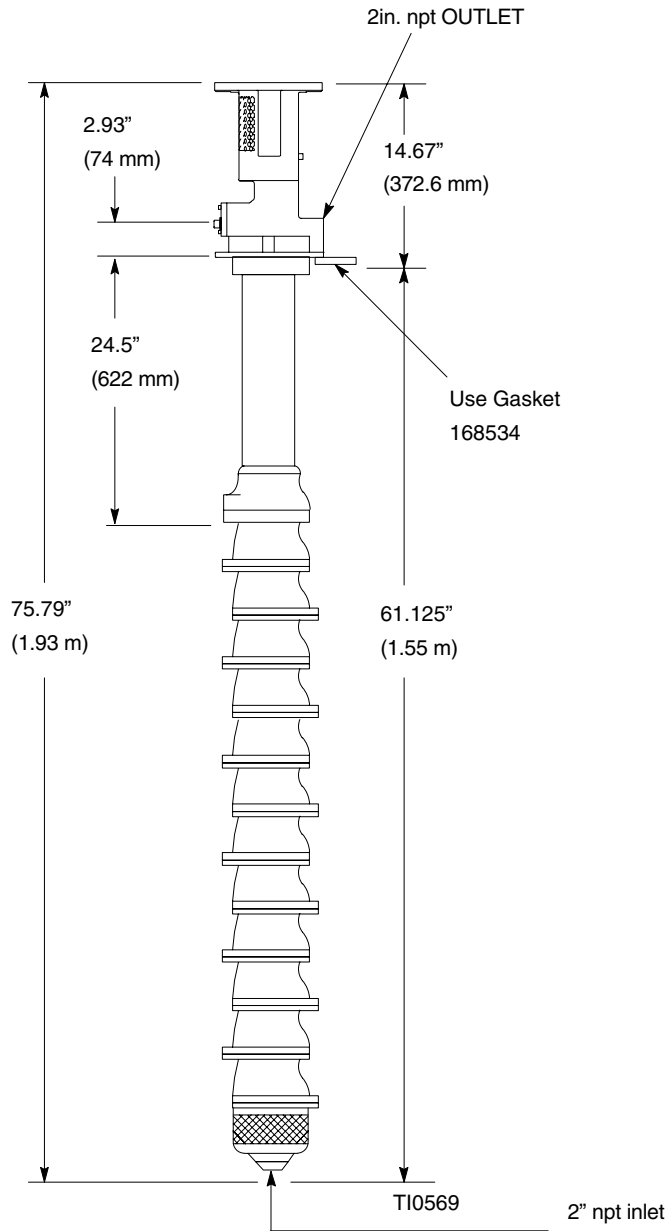

| Pump            | No. of Stages | Weight lb (kg) |
|-----------------|---------------|----------------|
| 223806 / 223706 | 6             | 205 (92)       |
| 223807 / 223707 | 7             | 207 (93)       |
| 223808 / 223708 | 8             | 208 (94)       |
| 223809 / 223709 | 9             | 210 (94)       |
| 223810 / 223710 | 10            | 211 (95)       |
| 223811 / 223711 | 11            | 213 (96)       |
| 223812 / 223712 | 12            | 224 (101)      |
| 223813 / 223713 | 13            | 225 (101)      |
| 223814 / 223714 | 14            | 235 (106)      |
| 237015          | 15            | 237 (106)      |

# Accessories

Use Only Genuine Graco Parts and Accessories

## **WARNING**

Be sure the valves, plumbing and accessories used in your system have a working pressure rating at least as high as the maximum working pressure rating of the pump.

### SERVICE TOOLS

#### Shaft Holding Tool 218634

#### Shaft Adjusting Tool 178779

Required for setting coupler gap.

#### Checking Tool 177217

#### Check Fixture 177218

Used with Checking Tool 177217 to check concentricity of new bearings pressed into impeller bowls.

#### Pressing Tool 177219

Used for pressing new bearings into bowls to maintain proper clearance of bearings.

#### Spanner Wrench 616637


For holding impellers while torquing impeller nuts.

#### Chevron SRI Grease-2 107411

14 oz. Required for lubricating pump. One tube is included with new pumps.

#### Assembly Stand 953912

Must be used to assemble the pump in the proper upright position, maintaining alignment.

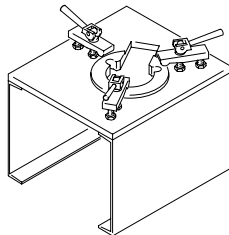

#### Back Pressure Valve 208997

180 psi (1.2 MPa, 12 bar) Controlled Working Pressure

200 psi (1.4 MPa, 14 bar) Maximum Working Pressure

Stainless Steel. 0.5 in. (12.7 mm) dia. orifice.

1-1/4 in. npt inlet and outlet.

Includes 200 psi (14 bar) pressure gauge.

#### High Capacity Bag Filters

300 psi (2.1 MPa, 21 bar) Maximum Working Pressure

Heavy-duty, large-area perforated filter bag baskets with 1/4 in. npt blowdown port on cover. Uses optional wire mesh liner for dual-stage filtration. Ask your distributor to show you Form No. 300081 for part number and ordering information.

#### Fluid Pressure Gauge and Pulsation Dampeners

300 psi (2.1 MPa, 21 bar) Maximum Working Pressure

1-1/4 in. npt inlet and outlet; inline.

Flow rating: 20 gpm (75 liters/min).

Calibrated at 100 centipoise, specific gravity 0.85.

**208855** For use with corrosive fluids.

1/4 npt(m) inlet. 300 psi (21 bar)

Maximum Working Pressure

**206171** For use with non-corrosive fluids.

1/4 npt(m) inlet. 200 psi (14 bar)

Maximum Working Pressure

#### Gasket 168534

Required for mounting pump on standpipe.

# Accessories

*Use Only Genuine Graco Parts and Accessories*

## Adapter Kit 213049

For 10 and 15 HP Electric Motors. Includes adapter plate, coupling, coupling insert, and screws and washers.

### Electric U-Frame Motors

| Motor  | H.P. | Voltage   | Rating        |
|--------|------|-----------|---------------|
| 521470 | 3    | 230/460   | Standard      |
| 521469 | 5    | 230/460   | Standard      |
| 521468 | 7.5  | 230/460   | Standard      |
| 521467 | 10   | 230/460   | Standard      |
| 521466 | 15   | 230/460   | Standard      |
| 521888 | 20   | 230/460   | Standard      |
| 521455 | 7.5  | 600       | Standard      |
| 51A649 | 3    | CSA 575   | Standard      |
| 51A650 | 5    | CSA 575   | Standard      |
| 51A651 | 7.5  | CSA 575   | Standard      |
| 51A652 | 10   | CSA 575   | Standard      |
| 51A653 | 15   | CSA 575   | Standard      |
| 51A654 | 20   | CSA 575   | Standard      |
| 516821 | 3    | 230/460   | Premium       |
| 516732 | 5    | 230/460   | Premium       |
| 516824 | 7.5  | 230/460   | Premium       |
| 516825 | 10   | 230/460   | Premium       |
| 516731 | 15   | 230/460   | Premium       |
| 516827 | 20   | 230/460   | Premium       |
| 51B297 | 3    | CSA 575   | Premium       |
| 51B298 | 5    | CSA 575   | Premium       |
| 51B299 | 7.5  | CSA 575   | Premium       |
| 51B300 | 10   | CSA 575   | Premium       |
| 51B301 | 15   | CSA 575   | Premium       |
| 51B302 | 20   | CSA 575   | Premium       |
| 114937 | 10   | 575       | Inverter Duty |
| 51B157 | 15   | 230/460   | Inverter Duty |
| 51B778 | 10   | 230/460   | Inverter Duty |
| 116228 | 10   | 380       | Inverter Duty |
| 51B673 | 7.5  | 380V/50Hz | Standard      |
| 51B674 | 10   | 380V/50Hz | Standard      |
| 51B675 | 15   | 380V/50Hz | Standard      |
| 51B676 | 20   | 380V/50Hz | Standard      |
| 51B677 | 7.5  | 380V/50Hz | Premium       |
| 51B678 | 10   | 380V/50Hz | Premium       |
| 51B679 | 15   | 380V/50Hz | Premium       |
| 51B680 | 20   | 380V/50Hz | Premium       |

### Electric T-Frame Motors

| Motor  | H.P. | Voltage   | Rating   |
|--------|------|-----------|----------|
| 521441 | 3    | 230/460   | Standard |
| 521429 | 5    | 230/460   | Standard |
| 51B296 | 7.5  | 230/460   | Standard |
| 516826 | 10   | 230/460   | Standard |
| 521456 | 15   | 230/460   | Standard |
| 521454 | 20   | 230/460   | Standard |
| 516822 | 3    | 230/460   | Premium  |
| 516823 | 5    | 230/460   | Premium  |
| 516774 | 7.5  | 230/460   | Premium  |
| 516775 | 10   | 230/460   | Premium  |
| 516776 | 15   | 230/460   | Premium  |
| 516828 | 20   | 230/460   | Premium  |
| 51B681 | 7.5  | 380V/50Hz | Premium  |
| 51B682 | 10   | 380V/50Hz | Premium  |
| 51B683 | 15   | 380V/50Hz | Premium  |
| 51B684 | 20   | 380V/50Hz | Premium  |

### General Motor Specification:

Class1, Group D, Division 1 Explosion Proof, Temp. Code T2B, Class F Insulation, Vertical.

# Technical Data

Power Supply required ..... 220/575 Volt AC, 3-phase, 50/60 Hz  
Flow Rate ..... 0-50 gpm (0-189 liter/min)  
Fluid Inlet and Outlet Size ..... 2 in. npt(f)  
Wetted Parts ..... Stainless Steel, PTFE, Viton®, Delrin®, Teflon-Coated Iron

Viton® and Delrin® are registered trademarks of the DuPont Co.