

The Thermo Scientific Ramsey Bob II gives you the most reliable, intelligent and rugged inventory and level measurement system on the market today. Its new remote sensor design will provide years of dependable, maintenance-free service. Your process will operate more efficiently and accurately, saving time and increasing profits.

Thermo Scientific Ramsey Bob II

Inventory Measurement System



Features

- Robust mechanical design
- Heavy duty but lightweight molded polypropylene housing
- Flexible communications capabilities
- Requires no field calibration or adjustment
- RS-485 digital communication
- Measurement of distances up to 45.7 m (150 ft) available
- Unaffected by dust, echo, vapors, temperature and steam
- Simple daisy chain wiring makes for easy and inexpensive installation
- Quick and easy system expandability
- Minimal operation and maintenance costs

Superior Design

The Thermo Scientific Ramsey Bob II gives you the most reliable, intelligent and rugged inventory measurement system on the market today. The new design of the Thermo Scientific BR-II remote sensor will provide years of dependable, maintenance-free service on vessels up to 45.7 m (150 ft) in height.

Flexible Communications

Equipped with digital signal processing and advanced electronics, the Ramsey Bob II provides you with the most communications options on the market: a simple manual interface that can control up to 30 vessels, and an interface that allows you to send and receive information with a PLC/DCS controlled system or a PC/HMI controlled system. The system can be configured to meet your specific application requirements.



How the System Works

When the system's remote is commanded to take a measurement, the motor releases a stainless steel cable from the supply pulley, which causes the weighted sensor probe to quickly descend from the top of the vessel to the surface of the material.

During the descent, the remote measures the length of cable dispensed. A micro-controller counts the pulses from an internal encoder that produces over 260 pulses per meter (80 pulses per foot). When the sensor probe touches the material surface, measurement information is transmitted to the electronics and its pulse generation is momentarily stopped. The absence of these pulses immediately causes the motor to reverse and retract the bob to its neutral position at the top of the vessel.

When the bob is fully retracted, its cap seats in a specially designed seated flange. An electronic torque control reduces motor torque during the last 30 cm (12 in) of the retract cycle. This assures maximum pull strength throughout the entire measurement cycle and a soft stop to protect the motor. The retract distance is also measured and compared to the descend measurement to verify that the bob fully retracted.



PC/Active X Controlled System

This system is designed in conjunction with a PC-based system using the Thermo Scientific Inventory Management System (IMS) software program. It is designed to give the operator total inventory management capability. This system can control up to 130 vessels and record the inventory using graphical representations of the vessels. The software also provides current inventory, inventory history, alarms, date and time, measurement scheduling capabilities, and alarm set points. It can communicate by fax, modem and more. A Microsoft® ActiveX® control is also available, which allows an existing HMI program to directly control and monitor remote sensors.

PLC/DCS Controlled System

This system is designed to operate with an existing PLC/DCS system that initiates a measurement by providing a dry contact signal to the SU control. The remote sensor performs the measurement and the SU control sends the signal via 4-20 mA analog output back to the PLC/DCS. Each vessel requires its own SU control. One SU is required for each BR-II Remote in the system.

Manually Controlled System

This system allows the operator to initiate a measurement with only the push of a button. The BC control will give an accurate measurement in feet to product, feet of product and percent full. One BC control can be used with up to 30 remote sensors. The last measurement on each remote is stored in a non-volatile memory.



BP-1
Spike designed for granular materials with angle of repose. For material with bulk density of 320 kg/m³ (20 lb/ft³) or greater. Comes standard with BRX remote.




BP-3
Bottle Bob filled with compatible material stored in vessel. For material with bulk density of 320 kg/m³ (20 lb/ft³) or greater.



BP-2
15.24 cm (6 in) hollow stainless steel inverted cone for liquids and light solids.



BP-7
316 Stainless Steel Spiked Bob. For materials with bulk density of 320 kg/m³ (20 lb/ft³) or greater. Comes standard with BR-II remote.

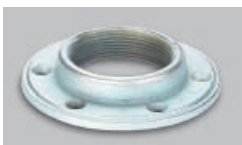

DN80 (3 in - 8 NPT) Mounting Flange
Comes standard with all remote sensors.



XFMR-12
120 VAC/16 VAC wall transformer provides 16 VAC to BC, SU and DU consoles.

Thermo Scientific Ramsey Bob II

| Remote Specifications | BR-II | BRX |
|-------------------------------|--|---|
| Power Requirement | 115 VAC 50/60 Hz; 230 VAC models available | 16 VAC 50/60 Hz |
| Power Consumption | 48 VA intermittent (motor on); 12 VA continuous | 36 VA intermittent (motor on); 2.1 VA continuous |
| Current Draw (RMS) | 0.4 A intermittent; 0.1 A continuous | 2.25 A intermittent; 0.13 A continuous |
| Temperature | | |
| • Electronics Temperature | -40°C to +85°C (-40°F to +185°F) | -40°C to +85°C (-40°F to +185°F) |
| • Process Temperature Maximum | +121°C (+250°F) | +121°C (+250°F) |
| • With High Temp Package | +260°C (+500°F) | +260°C (+500°F) |
| Measurement Range | 27.4 m (90 ft) standard; 45.7 m (150 ft) maximum | 27.4 m (90 ft) standard; 54.9 m (180 ft) maximum |
| Measurement Rate | 61 cm (2 ft) per second | 61 cm (2 ft) per second |
| Measurement Accuracy | 0.25% | 0.25% |
| Repeatability | 3 cm (1.18 in) | 3 cm (1.18 in) |
| Resolution | 0.4 cm (0.15 in) | 0.4 cm (0.15 in) |
| Communication | RS-485 half duplex | RS-485 half duplex |
| Wiring Distance | 1,220 m (4,000 ft) | 1,220 m (4,000 ft) |
| Approvals | NEMA 4X,5,12; Explosion Proof Class II, Groups E, F, G | NEMA 4X,5,7,9,12; Explosion Proof Class I, Groups C & D; Class II, Groups E, F, G |
| Mounting | DN80 (3 in - 8 NPT) floor flange | DN80 (3 in - 8 NPT) floor flange |
| Conduit Entry | DN20 (0.75 in - NPT) | DN20 (0.75 in - NPT) |
| Weight | 11.3 kg (25 lb) | 11.3 kg (25 lb) |
| Width | 40 cm (15.75 in) | 22.9 cm (9 in) |
| Height | 37.5 cm (14.75 in) | 35.6 cm (14 in) |
| Depth | 19 cm (7.5 in) | 24 cm (9.5 in) |
| Air Purge Entry | DN5 (0.25 in - 18 NPT) | DN5 (0.25 in - 18 NPT) |
| Cable | | |
| Standard | 316 stainless steel 1.6 mm (0.063 in) diameter nylon coated | 316 stainless steel 0.9 mm (0.037 in) diameter nylon coated |
| High Temperature | 316 Stainless Steel 1.6 mm (0.063 in) diameter Teflon® coated | 316 stainless steel 0.9 mm (0.037 in) diameter Teflon coated |
| Options | | |
| Heater | N/A | 16 VAC/25.6 VA/+4.4°C (+40°F) cycle temp |
| Transformer 150 VA | N/A | 120-230 VAC/16 VAC |
| Transformer 250 VA | N/A | 120-230 VAC/16 VAC |
| Communication Cable | Beldon 9463 shielded twisted pair | Beldon 9463 shielded twisted pair |
| Console Specifications | | |
| Power Requirement | 16 VAC @ 100 mA | |
| Output Signal | RS-485 digital, 4-20 mA analog | |
| Power Consumption | 1.6 VA | |
| Enclosure | NEMA 1 or 4X | |
| Weight | 0.4173 kg (0.92 lb) | |
| Dimensions | 12.95 cm H x 10.16 cm W x 6.60 cm D (5.1 in H x 4.0 in W x 2.6 in D) | |

©2007 Thermo Fisher Scientific Inc. All rights reserved. Microsoft and ActiveX are registered trademarks of Microsoft Corporation in the United States and/or other countries. Teflon is a registered trademarks of E. I. du Pont de Nemours and Company or its affiliates. All other trademarks are the property of Thermo Fisher Scientific Inc. and its subsidiaries. Results may vary under different operating conditions. Specifications, terms and pricing are subject to change. Not all products are available in all countries. Please consult your local sales representatives for details. Literature Code PL8024.1207

Australia
+61 (0) 8 8150 5300
+61 (0) 8 8234 5882 fax

Canada
+1 (905) 888-8808
+1 (905) 888-8828 fax

Chile
+56 (0) 2-335-3388
+56 (0) 2-335-1590 fax

China
+86 (0) 21 6865 4588
+86 (0) 21 6445 7830 fax

Germany
+49 (0) 208-824930
+49 (0) 208-852310 fax

India
+91 (20) 6626 7000
+91 (20) 6626 7001 fax

Italy
+39 02-959514-1
+39 02-953200-15 fax

Netherlands
+31 (0) 76-579-5555
+31 (0) 76-571-4958 fax

Poland
+48 (0) 22 651 7530
+48 (0) 22 651 7535 fax

South Africa
+27 (0) 11-609-3101
+27 (0) 11-609-3110 fax

Spain
+34 (0) 91-484-5965
+34 (0) 91-484-3597 fax

United Kingdom
+44 (0) 1788-820300
+44 (0) 1788-820301 fax

United States
+1 (800) 227-8891
+1 (763) 783-2525 fax
+1 (763) 783-2500 direct

www.thermo.com/bulk-handling