

The highly accurate Thermo Scientific Sarasota SG901 specific gravity analyzer reliably measures gas specific gravity/relative density (SG) or molecular weight (MW) of wet or dry gas. Redesigned to house all electronics within the stainless steel enclosure, this advanced analyzer offers rapid response to ensure process optimization and environmental compliance.

## Thermo Scientific Sarasota SG901 Specific Gravity Analyzers



### Features

- Accurate to 0.2% reading above 0.5 SG at reference conditions
- User selectable reference conditions
- Integral sample conditioning
- Options to suit dry or wet gas applications
- Hazardous area use
- Rugged construction for harsh environments
- No on-site calibration required

### Applications

- Gas blending control
- Standard volume flow control
- Refinery fuel gas monitoring (CV estimate)
- Oven/furnace gas monitoring (CV estimate)
- Flare control systems (MW monitoring)

Gas specific gravity (SG) measurement applications such as fuel gas monitoring and energy determination require continuous, high accuracy measurements to ensure maximum efficiency and minimum waste. Fast response is critical to ensure effective burner, furnace or flare gas monitoring and control.

The Thermo Scientific Sarasota SG901 specific gravity analyzer is recommended in applications where specific gravity (SG) or molecular weight (MW) can be used to infer density elsewhere in the plant, and where the gas is dirty or wet and requires filtering prior to the measurement.

The Sarasota SG901 is available in three standard configurations to suit the

application—the basic system, a dry gas system, and a wet gas system. Specific configuration requirements may also be accommodated within the systems if needed.

Housed in a stainless steel enclosure, the basic Sarasota SG901 system comprises a Thermo Scientific Sarasota FD900 gas density assembly, temperature element, and flow control valve. All components are interconnected by 6.35 mm (0.25 in) stainless steel tubing. The basic system is ideal for applications where the analyzer is used in conjunction with an existing gas conditioning system that provides a clean, dry sample at a pressure below 4 bar A (58 psia).

In applications where the gas is always above its dew point at ambient conditions, but the sample is not filtered and the pressure not controlled, a specific 'dry gas' configuration is available. This is similar to the basic system, but with an inlet pressure regulator, particulate filter, safety vent, calibration point, sample flowmeter, flow control needle valve, and isolation valves.

Gas streams with a possibility of significant moisture content that may drop below their dew point for very short periods require the 'wet gas' system. Based on the 'dry gas' system, the 'wet gas' system includes a coalescing filter and auto drain.


To maintain the measurement system above the gas dew points and to give additional repeatability, an optional steam or electric heater may be mounted within the enclosure.


Signal outputs from the transducers may be fed to a Thermo Scientific Sarasota CM515 control room mounted density converter. Alternatively, the Thermo Scientific Sarasota HME900 field-mounted density converter option provides a direct HART® compatible output.

Designed for harsh environments, the Sarasota SG901 requires minimal maintenance. Regular maintenance should be scheduled based on the operating conditions to ensure maximum uptime.



Sarasota SG901 Specific Gravity Analyzer — Dimensional Diagram

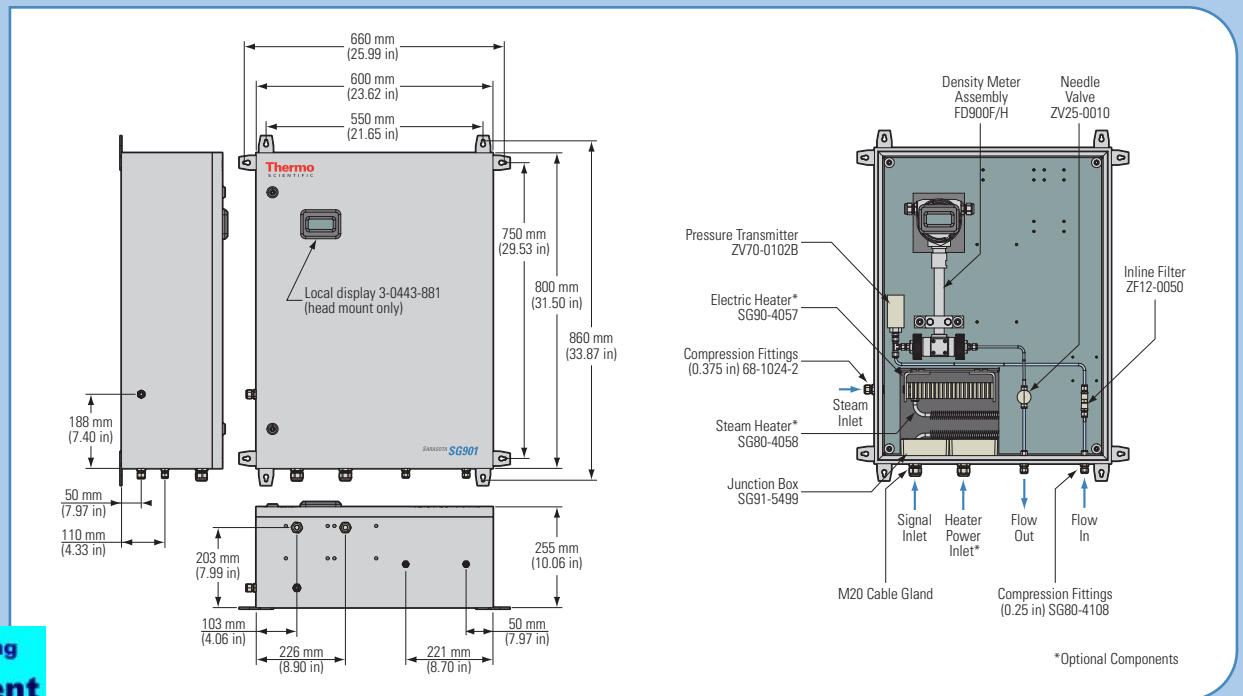

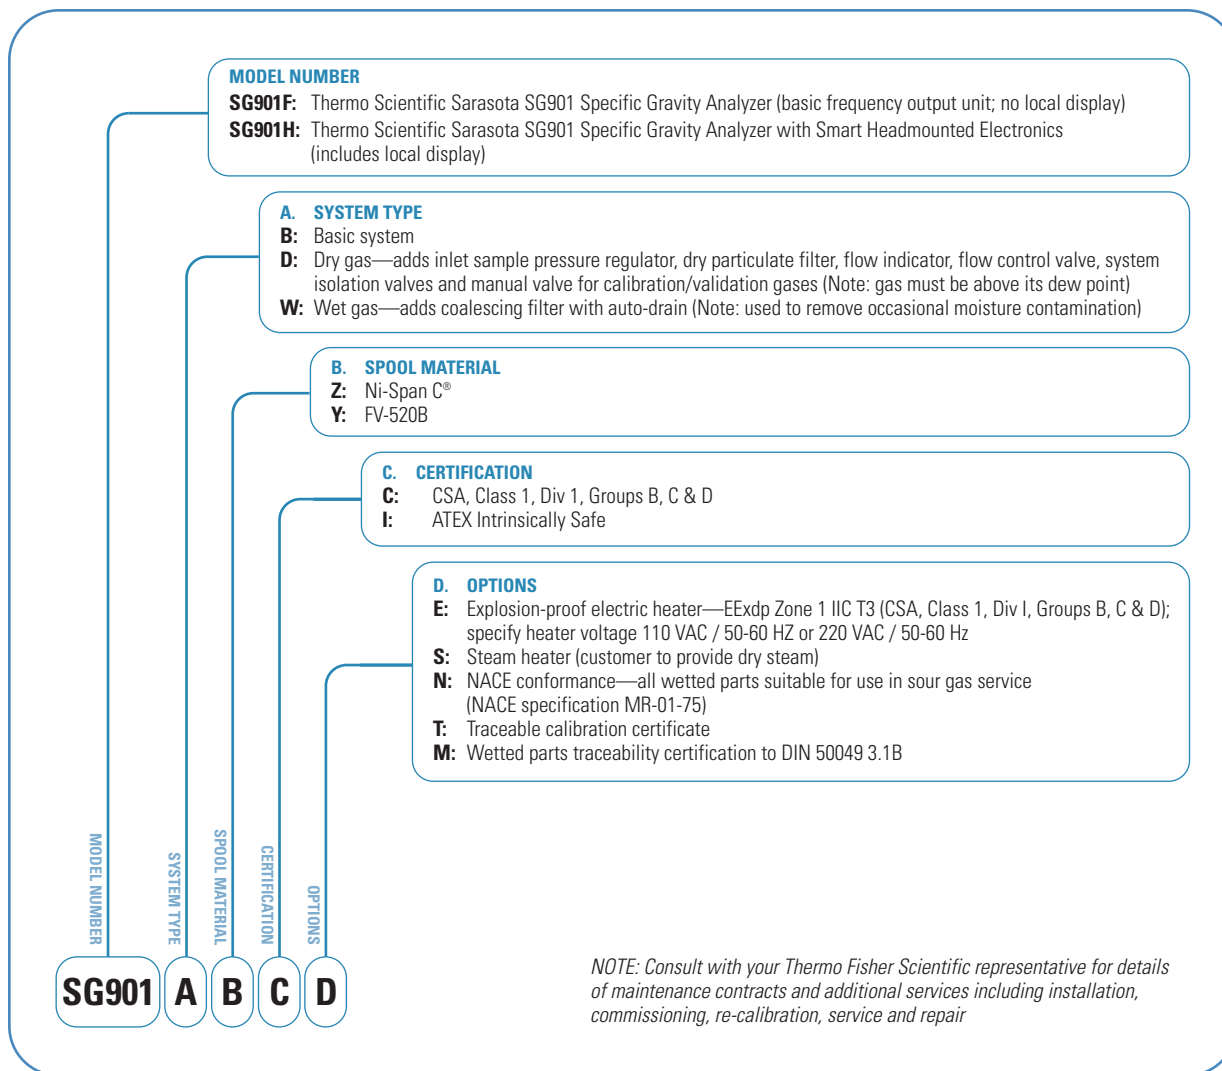

### Thermo Scientific CM515 Density Converter for SG901 Frequency Version

The Thermo Scientific CM515 density converter provides high integrity calculations of density and density related variables for the SG901 frequency version. The unit derives density at reference conditions and calculates density derived parameters, including process line density, referred density, specific gravity, process gravity and molecular weight. The front panel program selection makes the CM515 compatible with a wide range of density meter pulse outputs, including millivolt signals, reed switches, Namur proximity switches and pulse trains.

To ensure ease-of-use, the front panel displays the current values of the input variables along with the calculations. The backlit LCD display offers a wide viewing angle that ensures clear visibility in the field or control room. Parameters and calibration data can be monitored using either the RS232 or RS485 interface option for an optimal processing solution.



## Thermo Scientific Sarasota SG901

### Functional Specifications

Range	0-2 SG; for any other range, consult Thermo Fisher
Accuracy	±0.2% reading above 0.5 SG at reference conditions
Repeatability	±0.02% span
Flow Range	Ideally 4 l/min to 20 l/min (0.14 ft <sup>3</sup> /min to 0.7 ft <sup>3</sup> /min)
Temperature Coefficient (Corrected)	0.01%/°C (0.006%/°F)
Operating Temperature	Standard: -20°C to +55°C (-4°F to +131°F) or as limited by gas dew point; for other temperature ranges, consult Thermo Fisher
Sample Inlet Pressure	Basic system: standard 4 bar A (58 psia); for others to a maximum 20 bar (290 psi) consult Thermo Fisher Dry or wet gas system: 200 bar (2900 psi) maximum
Exhaust Pressure	Must be less than 4 bar A (58 psia), and less than the regulated inlet pressure by 0.4 bar A (5.8 psia)
Environmental Rating	IP65 (NEMA 4X)

### Physical Specifications

Spool Materials	Ni-Span C or FV520B	
Tubes and Fittings Materials	Stainless steel (316L /1.4404)	
System Enclosure Materials	Stainless steel	
Electronics Enclosure Materials	Copper free aluminum grey epoxy finish; Plate glass window for headmounted electronics local display option	
Temperature Measurement	High accuracy 1/3 DIN 4 wire PT100 (RTD)	
Dimensions	See dimensional diagrams	
Net Weight	Up to 60 kg (132 lb) depending on system	
Shipping Weight	Up to 94 kg (207 lb) depending on system	
Shipping Dimensions	940 mm x 940 mm x 270 mm (approx 37 in x 37 in x 27 in)	
Installation Configuration	6.35 mm (0.25 in) tubing compression fitting	
Electrical Connections	Instruments, IS screw terminals in FD900 terminal box (F & H versions); Heater, screw terminals in ExD enclosure	
Power Supply	F option: frequency output H option: headmounted electronics	Density transmitter: 16-28 VDC 10 mA average (peak 18 mA); Pressure transmitter: 9-30 VDC 20 mA 3 x 13-28 VDC 25 mA
Outputs	F option: frequency output H option: headmounted electronics	Frequency related to density on 2 wire current modulated loop 6 mA to 18 mA; 4 wire PT100; 4-20 mA pressure Analog 4-20 mA related to SG, density, or density derived variable; HART protocol

### Compliance/Certification (pending)

Quality Assurance	ISO 9001:2000
CE Mark	Compliant
Electromagnetic Compatibility (EN 61326:1997)	Compliant
Pressure Equipment Directive (97/23/EC)	SEP (sound engineering practice)
Safe Area Use	As standard
BS EN ISO 15156 / NACE MR0175 Conformance	Available as option
ATEX Conformance:	Sarasota FD900/F option (frequency output): EEx ia IIC T6
Intrinsically Safe (94/9/EC)	Sarasota FD900/H option (headmounted electronics): EEx ia IIC T4 Pressure transmitter: EEx ia IIC T4 Heater: EExdp IIC T3
Canadian Standards Association (CSA)	Class I, Div 1, Groups B, C & D
Calibration Certification	Calibration traceable to national standards. Calibration certificates supplied as standard. Optional traceable calibration equipment listing available.
Materials Traceability	Wetted parts traceable to BS EN 10204.3.1.b; Certification available

© 2009 Thermo Fisher Scientific Inc. All rights reserved. Ni-Span C is a registered trademark of the Special Metals Corporation. HART is the registered trademark of the HART Communication Foundation. Results may vary under different operating conditions. Specifications, terms and pricing are subject to change. Not all products are available in all countries. Please consult your local sales representatives for details. Literature Code PI.2065.0109

Unit 702-715, 7/F Tower West Yonghe Plaza No. 28, Andingmen East Street Beijing 100007 CHINA	+86 (10) 8419-3588 +86 (10) 8419-3580 fax
A-101, ICC Trade Tower, Senapati Bapat Road Pune 411016 Maharashtra INDIA	+91 (20) 6626 7000 +91 (20) 6626 7001 fax
Ion Path, Road Three, Winsford, Cheshire CW7 3GA UK	+44 (0) 1606 548700 +44 (0) 1606 548711 fax
1410 Gillingham Lane Sugar Land, TX 77478 USA	+1 (800) 437-7979 +1 (713) 272-0404 +1 (713) 272-4573 fax